

**TS-3GA-36.425(Rel12)v12.0.0**  
**Evolved Universal Terrestrial Radio**  
**Access Network (E-UTRAN); X2**  
**interface user plane protocol**

2015年3月5日制定

一般社団法人  
情報通信技術委員会

THE TELECOMMUNICATION TECHNOLOGY COMMITTEE

本書は、一般社団法人情報通信技術委員会が著作権を保有しています。  
内容の一部又は全部を一般社団法人情報通信技術委員会の許諾を得ることなく複製、  
転載、改変、転用及びネットワーク上での送信、配布を行うことを禁止します。

<参考> [Remarks]

1. 英文記述の適用レベル [Application level of English description]

適用レベル [Application level] : E2

本標準の本文、付属資料および付録の文章および図に英文記述を含んでいる。

[English description is included in the text and figures of main body, annexes and appendices.]

2. 国際勧告等の関連 [Relationship with international recommendations and standards]

本標準は、3GPP で承認された Technical Specification 36.425 (Version 12.0.0) に準拠している。

[This standard is standardized based on the Technical Specification 36.425 (Version 12.0.0) approved by 3GPP.]

3. 上記国際勧告等に対する追加項目等 [Departures from international recommendations]

原標準に対する変更項目 [Changes to original standard]

原標準が参照する標準のうち、TTC 標準に置き換える項目。 [Standards referred to in the original standard, which are replaced by TTC standards.]

原標準が参照する標準のうち、それらに準拠した TTC 標準等が制定されている場合は自動的に最新版 TTC 標準等に置き換え参照するものとする。 [Standards referred to in the original standard should be replaced by derived TTC standards.]

4. 工業所有権 [IPR]

本標準に関わる「工業所有権等の実施の権利に係る確認書」の提出状況は、TTC ホームページによる。

[Status of “Confirmation of IPR Licensing Condition” submitted is provided in the TTC web site.]

5. 作成専門委員会 [Working Group]

3GPP 専門委員会 [3GPP Working Group]

# 3GPP TS 36.425 V12.0.0 (2014-12)

---

*Technical Specification*

**3rd Generation Partnership Project;  
Technical Specification Group Radio Access Network;  
Evolved Universal Terrestrial Radio Access Network  
(E-UTRAN);  
X2 interface user plane protocol  
(Release 12)**

---



Keywords

---

LTE, radio

**3GPP**

Postal address

---

3GPP support office address

---

650 Route des Lucioles - Sophia Antipolis  
Valbonne - FRANCE  
Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Internet

---

<http://www.3gpp.org>

---

**Copyright Notification**

---

No part may be reproduced except as authorized by written permission.  
The copyright and the foregoing restriction extend to reproduction in all media.

© 2014, 3GPP Organizational Partners (ARIB, ATIS, CCSA, ETSI, TTA, TTC).  
All rights reserved.

UMTS™ is a Trade Mark of ETSI registered for the benefit of its members  
3GPP™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners  
LTE™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners  
GSM® and the GSM logo are registered and owned by the GSM Association

# Contents

Foreword.....	4
1 Scope.....	5
2 References.....	5
3 Definitions, symbols and abbreviations .....	5
3.1 Definitions .....	5
3.2 Abbreviations.....	5
4 General .....	6
4.1 General aspects .....	6
5 X2 user plane protocol .....	7
5.1 General.....	7
5.2 X2 user plane protocol layer services .....	7
5.3 Services expected from the X2 Transport Network Layer.....	7
5.4 Elementary procedures .....	8
5.4.1 Transfer of Downlink User Data .....	8
5.4.1.1 Successful operation.....	8
5.4.1.2 Unsuccessful operation.....	8
5.4.2 Downlink Data Delivery Status.....	8
5.4.2.1 Successful operation.....	8
5.4.2.2 Unsuccessful operation.....	9
5.5 Elements for the X2 user plane protocol.....	10
5.5.1 General .....	10
5.5.2 Frame format for the X2 user plane protocol .....	11
5.5.2.1 DL USER DATA (PDU Type 0).....	11
5.5.2.2 DL DATA DELIVERY STATUS (PDU Type 1) .....	12
5.5.3 Coding of information elements in frames.....	13
5.5.3.1 PDU Type.....	13
5.5.3.2 Spare.....	13
5.5.3.3 X2-U Sequence Number.....	13
5.5.3.4 Lost Packet Report .....	13
5.5.3.5 Final Frame Indication.....	13
5.5.3.6 Highest successfully delivered PDCP Sequence Number .....	13
5.5.3.7 Desired buffer size for the E-RAB .....	13
5.5.3.8 Minimum desired buffer size for the UE.....	14
5.5.3.9 Number of lost X2-U Sequence Number ranges reported .....	14
5.5.3.10 Start of lost X2-U Sequence Number range .....	14
5.5.3.11 End of lost X2-U Sequence Number range .....	14
5.5.3.12 Spare extension.....	14
5.5.4 Timers .....	14
5.6 Handling of unknown, unforeseen and erroneous protocol data.....	14
<b>Annex A (informative): Change history .....</b>	<b>15</b>

---

## Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

---

# 1 Scope

The present document specifies the X2 user plane protocol being used over the X2 interface.

---

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
  - [2] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
  - [3] 3GPP TS 29.281: "General Packet Radio System (GPRS) Tunnelling Protocol User Plane (GTPv1-U)".
- 

## 3 Definitions, symbols and abbreviations

### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

**Master eNB:** as defined in TS 36.300 [2].

**Secondary eNB:** as defined in TS 36.300 [2].

**Split bearer:** as defined in TS 36.300 [2].

### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

DC	Dual Connectivity
DL	Downlink
E-RAB	E-UTRAN Radio Access Bearer
MeNB	Master eNB
SeNB	Secondary eNB
UL	Uplink
UP	User Plane
X2 UP	X2 User Plane



---

## 4 General

### 4.1 General aspects

The X2 user plane (X2 UP) protocol is located in the User Plane of the Radio Network layer over the X2 interface.

The X2 UP protocol is used to convey control information related to the user data flow management of E-RABs.

Each X2 UP protocol instance is associated to one E-RAB only.

This version of the present document defines the X2 UP protocol in the context of dual connectivity only, more specifically, only for X2 user data bearers setup for E-RABs configured with the split bearer option.

If configured, X2 UP protocol instances exist at the eNBs between which the X2 user data bearers are setup, specifically for dual connectivity between the MeNB and the SeNB.

**NOTE:** X2 user data bearers may be setup for data forwarding purposes during X2 HO or during DC related mobility, however, these X2 user data bearers do not require the execution of any additional E-RAB related UP protocol functions related to an X2 UP protocol instance.

In this version of the present document, X2 UP protocol data is conveyed by GTP-U protocol means, more specifically, by means of the "RAN Container" GTP-U extension header as defined in TS 29.281 [3].

---

## 5 X2 user plane protocol

### 5.1 General

The X2 UP protocol layer is using services of the transport network layer in order to allow flow control of user data packets transferred over the X2 interface.

### 5.2 X2 user plane protocol layer services

The following functions are provided by the X2 UP protocol:

- Provision of X2 UP specific sequence number information for user data transferred from the MeNB to the SeNB for a specific E-RAB configured with the split bearer option;
- Information of successful in sequence delivery of PDCP PDUs to the UE from SeNB for user data associated with a specific E-RAB configured with the split bearer option;
- Information of PDCP PDUs that were not delivered to the UE;
- Information of the currently desired buffer size at the SeNB for transmitting to the UE user data associated with a specific E-RAB configured with the split bearer option;
- Information of the currently minimum desired buffer size at the SeNB for transmitting to the UE user data associated with all E-RABs configured with the split bearer option.

### 5.3 Services expected from the X2 Transport Network Layer

The X2 user plane protocol layer expects the following services from the Transport Network Layer:

- Transfer of user data.

## 5.4 Elementary procedures

### 5.4.1 Transfer of Downlink User Data

#### 5.4.1.1 Successful operation

The purpose of the Transfer of Downlink User Data procedure is to provide X2-U specific sequence number information at the transfer of user data carrying at least one DL PDCP PDU from the MeNB to the SeNB via the X2-U interface.


An X2 user plane instance making use of the Transfer of Downlink User Data procedure is associated to a single E-RAB only. The Transfer of Downlink User Data procedure is invoked whenever user data for that particular E-RAB needs to be sent across the X2-U interface.

The MeNB shall assign consecutive X2-U sequence numbers to each transferred X2-U packet.

The SeNB shall detect whether an X2-U packet was lost and memorise the respective sequence number after it has declared the respective X2-U packet as being "lost".

The SeNB shall transfer the remaining PDCP PDUs towards the UE and memorise the highest PDCP PDU sequence number of that X2-U packet from which all contained PDCP PDUs were successfully delivered in sequence towards the UE.

**NOTE:** The Transfer of Downlink User Data procedure and the associated feedback of lost X2-U packets assist the MeNB in avoiding PDCP HFN de-synchronisation. If an E-UTRAN deployment decides to not use the Transfer of Downlink User Data procedure, PDCP HFN synchronization should be ensured by other means.

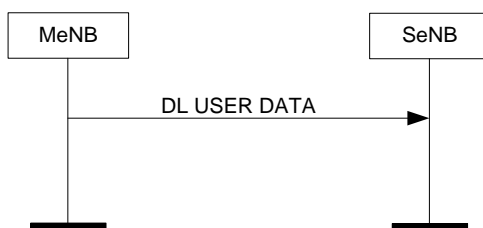

**Figure 5.4.1.1-1: Successful Transfer of Downlink User Data**

#### 5.4.1.2 Unsuccessful operation

Void.

### 5.4.2 Downlink Data Delivery Status

#### 5.4.2.1 Successful operation

The purpose of the Downlink Data Delivery Status procedure is to provide feedback from the SeNB to the MeNB to allow the MeNB to control the downlink user data flow via the SeNB for the respective E-RAB. The SeNB may also transfer uplink user data for the concerned E-RAB to the MeNB together with a DL DATA DELIVERY STATUS frame within the same GTP-U PDU.

When the SeNB decides to trigger the Feedback for Downlink Data Delivery procedure it shall report:

- a) the highest PDCP PDU sequence number successfully delivered in sequence to the UE among those PDCP PDUs received from the MeNB;
- b) the desired buffer size in bytes for the concerned E-RAB;
- c) the minimum desired buffer size in bytes for the UE;

- d) the X2-U packets that were declared as being "lost" by the SeNB and have not yet been reported to the MeNB within the DL DATA DELIVERY STATUS frame.

NOTE: If an E-UTRAN deployment has decided not to use the Transfer of Downlink User Data procedure, d) above is not applicable.

The DL DATA DELIVERY STATUS frame shall also include an indication whether the frame is the last DL status report received in the course of releasing a bearer from the SeNB. When receiving such indication, if applicable, the MeNB considers that no more UL data is to be expected from the SeNB.

The MeNB, when receiving the DL DATA DELIVERY STATUS frame:

- regards the desired buffer size under b) and c) above as the amount of data desired from the SeNB being declared
- from the PDCP sequence number reported under a) above within the same frame, as well as from the most recently reported PDCP sequence number(s) of all other E-RABs established for the UE;
- as the momentary desired buffer sizes, independent of buffer sizes indicated in the past.
- is allowed to remove the buffered PDCP PDUs according to the feedback of successfully delivered PDCP PDUs;
- decides upon the actions necessary to take for PDCP PDUs reported other than successfully delivered.

After being reported to the MeNB, the SeNB removes the respective PDCP sequence numbers.



**Figure 5.4.2.1-1: Successful Downlink Data Delivery Status**

#### 5.4.2.2 Unsuccessful operation

Void.

## 5.5 Elements for the X2 user plane protocol

### 5.5.1 General

In the present document the structure of frames are specified by using figures similar to figure 5.5.1-1.

Bits								Number of Octets	
7	6	5	4	3	2	1	0		
Field 1				Field 2				1	Octet 1
Field 3						Field 4		2	Octet 2
Field 4 continue				Spare					Octet 3
Field 6								2	Octet 4
Field 6 continue				Padding					Octet 5
Spare extension								0-m	

**Figure 5.5.1-1: Example frame format**

Unless otherwise indicated, fields which consist of multiple bits within an octet have the most significant bit located at the higher bit position (indicated above frame in figure 5.5.1-1). In addition, if a field spans several octets, most significant bits are located in lower numbered octets (right of frame in figure 5.5.1-1).

On the X2 interface, the frame is transmitted starting from the lowest numbered octet. Within each octet, the bits are sent according decreasing bit position (bit position 7 first).

Spare bits should be set to "0" by the sender and should not be checked by the receiver.

The header part of the frame is always an integer number of octets. The payload part is octet aligned (by adding 'Padding' when needed).

The receiver should be able to remove an additional spare extension field that may be present at the end of a frame. See description of Spare extension field.

## 5.5.2 Frame format for the X2 user plane protocol

### 5.5.2.1 DL USER DATA (PDU Type 0)

This frame format is defined to allow the SeNB to detect lost X2-U packets and is associated with the transfer of at least one Downlink PDCP PDU over the X2-U interface.

The following shows the respective DL USER DATA frame.

Bits								Number of Octets
7	6	5	4	3	2	1	0	
PDU Type (=0)				spare				1
X2-U Sequence Number								2
Spare extension								0-4

**Figure 5.5.2.1-1: DL USER DATA (PDU Type 0) Format**

### 5.5.2.2 DL DATA DELIVERY STATUS (PDU Type 1)

This frame format is defined to transfer feedback to allow the receiving MeNB to control the downlink user data flow via the SeNB.

Bits								Number of Octets
7	6	5	4	3	2	1	0	
PDU Type (=1)				Spare		Final Frame Ind.	Lost Packet Report	1
Highest successfully delivered PDCP Sequence Number								2
Desired buffer size for the E-RAB								4
Minimum desired buffer size for the UE								4
Number of lost X2-U Sequence Number ranges reported								1
Start of lost X2-U Sequence Number range								4* (Number of reported lost X2-u SN ranges)
End of lost X2-U Sequence Number range								
Spare extension								0-4

**Figure 5.5.2.2-1: DL DATA DELIVERY STATUS (PDU Type 1) Format**

## 5.5.3 Coding of information elements in frames

### 5.5.3.1 PDU Type

**Description:** The PDU Type indicates the structure of the X2 UP frame. The field takes the value of the PDU Type it identifies; i.e. "0" for PDU Type 0. The PDU type is in bit 4 to bit 7 in the first octet of the frame.

**Value range:** {0=DL USER DATA, 1=DL DATA DELIVERY STATUS, 2-15=reserved for future PDU type extensions}

**Field length:** 4 bits

### 5.5.3.2 Spare

**Description:** The spare field is set to "0" by the sender and should not be interpreted by the receiver. This field is reserved for later versions.

**Value range:**  $(0-2^n-1)$ .

**Field Length:** n bits.

### 5.5.3.3 X2-U Sequence Number

**Description:** This parameter indicates the X2-U sequence number as assigned by the respective eNB.

**Value range:**  $\{0..2^{16}-1\}$ .

**Field length:** 2 octets.

### 5.5.3.4 Lost Packet Report

**Description:** This parameter indicates the presence of a list of lost X2-U packets in the respective X2 UP frame.

**Value range:** {0=Lost Frame List not present, 1=Lost Frame List present}.

**Field length:** 1 bit.

### 5.5.3.5 Final Frame Indication

**Description:** This parameter indicates whether the frame is the last DL status report as described in clause 5.4.2.1.

**Value range:** {0=Frame is not final, 1= Frame is final}.

**Field length:** 1 bit.

### 5.5.3.6 Highest successfully delivered PDCP Sequence Number

**Description:** This parameter indicates feedback about the in-sequence delivery status of PDCP PDUs at the SeNB towards the UE.

**Value range:**  $\{0..2^{15}-1\}$ .

**Field length:** 2 octets.

### 5.5.3.7 Desired buffer size for the E-RAB

**Description:** This parameter indicates the desired buffer size for the concerned E-RAB as specified in clause 5.4.2.1.

**Value range:**  $\{0..2^{32}-1\}$ .

**Field length:** 4 octets.



### 5.5.3.8 Minimum desired buffer size for the UE

**Description:** This parameter indicates the minimum desired buffer size for all E-RABs established for the UE as specified in clause 5.4.2.1.

**Value range:**  $\{0..2^{32}-1\}$ .

**Field length:** 4 octets.

### 5.5.3.9 Number of lost X2-U Sequence Number ranges reported

**Description:** This parameter indicates the number of X2-U Sequence Number ranges reported to be lost.

**Value range:**  $\{1..256\}$ .

**Field length:** 1 octet.

### 5.5.3.10 Start of lost X2-U Sequence Number range

**Description:** This parameter indicates the start of an X2-U sequence number range.

**Value range:**  $\{0..2^{16}-1\}$ .

**Field length:** 2 octets.

### 5.5.3.11 End of lost X2-U Sequence Number range

**Description:** This parameter indicates the end of an X2-U sequence number range.

**Value range:**  $\{0..2^{16}-1\}$ .

**Field length:** 2 octets.

### 5.5.3.12 Spare extension

**Description:** The spare extension field shall not be sent. The receiver should be capable of receiving a spare extension. The spare extension should not be interpreted by the receiver, since in later versions of the present document additional new fields might be added in place of the spare extension. The spare extension can be an integer number of octets carrying new fields or additional information; the maximum length of the spare extension field (m) depends on the PDU type.

**Value range:**  $0-2^{m*8}-1$ .

**Field Length:** 0–m octets. For the PDU Types defined in the present document  $m=4$ .

## 5.5.4 Timers

Not applicable.

## 5.6 Handling of unknown, unforeseen and erroneous protocol data

Void.

---

## Annex A (informative): Change history

Change history						
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	New
2014-08					First draft version of this specification.	0.0.0
2014-08					Version edited during RAN3#85	0.1.0
2014-08					MCC clean-up	0.1.1
2014-10					Version provided to RAN3#85bis with new TS number	0.2.0
2014-10					Version edited during RAN3#85bis	0.3.0
2014-11					Version edited during RAN3#86	0.4.0
2014-12					Submitted for one-step approval	1.0.0
2014-12	RAN#66	RP-141980			Specification approved at RAN#66 and places under change control	12.0.0