

TS-3GA-36.444(Rel12)v12.2.0
Evolved Universal Terrestrial Radio
Access Network (E-UTRAN); M3
Application Protocol (M3AP)

2015年6月30日制定

一般社団法人
情報通信技術委員会

THE TELECOMMUNICATION TECHNOLOGY COMMITTEE

本書は、一般社団法人情報通信技術委員会が著作権を保有しています。
内容の一部又は全部を一般社団法人情報通信技術委員会の許諾を得ることなく複製、
転載、改変、転用及びネットワーク上での送信、配布を行うことを禁止します。

<参考> [Remarks]

1. 英文記述の適用レベル [Application level of English description]

適用レベル [Application level] : E2

本標準の本文、付属資料および付録の文章および図に英文記述を含んでいる。

[English description is included in the text and figures of main body, annexes and appendices.]

2. 国際勧告等の関連 [Relationship with international recommendations and standards]

本標準は、3GPP で承認された Technical Specification 36.444 (Version 12.2.0) に準拠している。

[This standard is standardized based on the Technical Specification 36.444 (Version 12.2.0) approved by 3GPP.]

3. 上記国際勧告等に対する追加項目等 [Departures from international recommendations]

原標準に対する変更項目 [Changes to original standard]

原標準が参照する標準のうち、TTC 標準に置き換える項目。 [Standards referred to in the original standard, which are replaced by TTC standards.]

原標準が参照する標準のうち、それらに準拠した TTC 標準等が制定されている場合は自動的に最新版 TTC 標準等に置き換え参照するものとする。 [Standards referred to in the original standard should be replaced by derived TTC standards.]

4. 工業所有権 [IPR]

本標準に関わる「工業所有権等の実施の権利に係る確認書」の提出状況は、TTC ホームページによる。

[Status of “Confirmation of IPR Licensing Condition” submitted is provided in the TTC web site.]

5. 作成専門委員会 [Working Group]

3GPP 専門委員会 [3GPP Working Group]

3GPP TS 36.444 V12.2.0 (2015-03)

Technical Specification

**3rd Generation Partnership Project;
Technical Specification Group Radio Access Network;
Evolved Universal Terrestrial Radio Access Network
(E-UTRAN);
M3 Application Protocol (M3AP)
(Release 12)**



Keywords

LTE, MBMS, radio

3GPP

Postal address

3GPP support office address

650 Route des Lucioles - Sophia Antipolis
Valbonne - FRANCE
Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Internet

<http://www.3gpp.org>

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© 2015, 3GPP Organizational Partners (ARIB, ATIS, CCSA, ETSI, TSDSI, TTA, TTC).
All rights reserved.

UMTS™ is a Trade Mark of ETSI registered for the benefit of its members
3GPP™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners
LTE™ is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners
GSM® and the GSM logo are registered and owned by the GSM Association

Contents

Foreword	6
1 Scope	7
2 References	7
3 Definitions, symbols and abbreviations	8
3.1 Definitions	8
3.2 Symbols	8
3.3 Abbreviations	9
4 General	9
4.1 Procedure specification principles	9
4.2 Forwards and backwards compatibility	10
4.3 Specification notations	10
5 M3AP Services	10
6 Services Expected from Signalling Transport	10
7 Functions of M3AP	10
8 M3AP Procedures	11
8.1 Elementary procedures	11
8.2 MBMS Session Start	11
8.2.1 General	11
8.2.2 Successful Operation	12
8.2.3 Unsuccessful Operation	13
8.2.4 Abnormal Conditions	13
8.3 MBMS Session Stop	13
8.3.1 General	13
8.3.2 Successful Operation	13
8.3.3 Unsuccessful Operation	14
8.3.4 Abnormal Conditions	14
8.4 Error Indication	14
8.4.1 General	14
8.4.2 Successful Operation	14
8.4.3 Abnormal Conditions	15
8.5 Reset	15
8.5.1 General	15
8.5.2 Successful Operation	15
8.5.2.1 Reset Procedure Initiated from the MME	15
8.5.2.2 Reset Procedure Initiated from the E-UTRAN	16
8.5.3 Abnormal Conditions	17
8.5.3.1 Abnormal Condition at the EPC	17
8.5.3.2 Abnormal Condition at the E-UTRAN	17
8.5.3.3 Crossing of Reset Messages	17
8.6 MBMS Session Update	17
8.6.1 General	17
8.6.2 Successful Operation	18
8.6.3 Unsuccessful Operation	18
8.6.4 Abnormal Conditions	18
8.7 M3 Setup	19
8.7.1 General	19
8.7.2 Successful Operation	19
8.7.3 Unsuccessful Operation	19
8.7.4 Abnormal Conditions	20
8.8 MCE Configuration Update	20
8.8.1 General	20
8.8.2 Successful Operation	20

8.8.3	Unsuccessful Operation.....	21
8.8.4	Abnormal Conditions.....	21
9	Elements for M3AP Communication.....	21
9.1	Message Functional Definition and Content.....	21
9.1.1	General.....	21
9.1.2	Message Contents.....	21
9.1.2.1	Presence.....	21
9.1.2.2	Criticality.....	22
9.1.2.3	Range.....	22
9.1.2.4	Assigned Criticality.....	22
9.1.3	MBMS SESSION START REQUEST.....	22
9.1.4	MBMS SESSION START RESPONSE.....	23
9.1.5	MBMS SESSION START FAILURE.....	23
9.1.6	MBMS SESSION STOP REQUEST.....	23
9.1.7	MBMS SESSION STOP RESPONSE.....	24
9.1.8	ERROR INDICATION.....	24
9.1.9	RESET.....	24
9.1.10	RESET ACKNOWLEDGE.....	25
9.1.11	MBMS SESSION UPDATE REQUEST.....	25
9.1.12	MBMS SESSION UPDATE RESPONSE.....	26
9.1.13	MBMS SESSION UPDATE FAILURE.....	26
9.1.14	M3 SETUP REQUEST.....	26
9.1.15	M3 SETUP RESPONSE.....	27
9.1.16	M3 SETUP FAILURE.....	27
9.1.17	MCE CONFIGURATION UPDATE.....	27
9.1.18	MCE CONFIGURATION UPDATE ACKNOWLEDGE.....	28
9.1.19	MCE CONFIGURATION UPDATE FAILURE.....	28
9.2	Information Element Definitions.....	28
9.2.0	General.....	28
9.2.1	Radio Network Layer Related IEs.....	29
9.2.1.1	Message Type.....	29
9.2.1.2	Cause.....	29
9.2.1.3	MBMS E-RAB QoS parameters.....	31
9.2.1.4	Void.....	32
9.2.1.5	GBR QoS Information.....	32
9.2.1.6	Bit Rate.....	32
9.2.1.7	Criticality Diagnostics.....	32
9.2.1.8	Allocation and Retention Priority.....	33
9.2.1.9	Time to Wait.....	34
9.2.1.10	Global MCE ID.....	34
9.2.2	Transport Network Layer Related IEs.....	34
9.2.2.1	IP Address.....	34
9.2.2.2	GTP-TEID.....	34
9.2.3	NAS Related IEs.....	34
9.2.3.1	MCE MBMS M3AP ID.....	34
9.2.3.2	MME MBMS M3AP ID.....	35
9.2.3.3	TMGI.....	35
9.2.3.4	MBMS Session Identity.....	35
9.2.3.5	MBMS Session Duration.....	35
9.2.3.6	MBMS Service Area.....	35
9.2.3.7	PLMN Identity.....	35
9.2.3.8	Minimum Time to MBMS Data Transfer.....	36
9.2.3.9	Absolute Time of MBMS Data.....	36
9.2.3.10	Re-establishment.....	37
9.3	Message and Information Element Abstract Syntax (with ASN.1).....	38
9.3.1	General.....	38
9.3.2	Usage of Private Message Mechanism for Non-standard Use.....	38
9.3.3	Elementary Procedure Definitions.....	38
9.3.4	PDU Definitions.....	42
9.3.5	Information Element definitions.....	51
9.3.6	Common definitions.....	57

9.3.7 Constant definitions 58
9.3.8 Container definitions 60
9.4 Message Transfer Syntax 64
9.5 Timers 64
10 Handling of Unknown, Unforeseen and Erroneous Protocol Data 64
Annex A (informative): Change history 64

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the E-UTRAN radio network layer signalling protocol for the M3 interface. The M3 Application Protocol (M3AP) supports the functions of M3 interface by signalling procedures defined in this document. M3AP is developed in accordance to the general principles stated in TS 36.401 [2] and TS 36.300 [3].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 36.401: "E-UTRAN Architecture Description".
- [3] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
- [4] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
- [5] ITU-T Recommendation X.680 (2002-07): "Information technology - Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- [6] 3GPP TS 23.246: "Multimedia Broadcast/Multicast Service (MBMS); Architecture and functional description".
- [7] 3GPP TS 23.203: "Policy and charging control architecture"
- [8] 3GPP TS 29.061: "Interworking between the Public Land Mobile Network (PLMN) supporting packet based services and Packet Data Networks (PDN)".
- [9] 3GPP TS 36.445: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); M1 Data Transport".
- [10] 3GPP TS 48.018: "General Packet Radio Service (GPRS); BSS GPRS Protocol (BSSGP)".
- [11] 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
- [12] 3GPP TS 29.281: "General Packet Radio Service (GPRS); Tunnelling Protocol User Plane (GTPv1-U)".
- [13] 3GPP TS 23.003: "Technical Specification Group Core Network and Terminals; Numbering, addressing and identification".
- [14] 3GPP TS 23.007: "Technical Specification Group Core Network and Terminals; Restoration procedures".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

Elementary Procedure: M3AP consists of Elementary Procedures (EPs). An Elementary Procedure is a unit of interaction between MCEs and the EPC. These Elementary Procedures are defined separately and are intended to be used to build up complete sequences in a flexible manner. If the independence between some EPs is restricted, it is described under the relevant EP description. Unless otherwise stated by the restrictions, the EPs may be invoked independently of each other as stand alone procedures, which can be active in parallel. The usage of several M3AP EPs together or together with EPs from other interfaces is specified in stage 2 specifications (e.g. TS 23.246 [6] and TS 36.300 [3]).

An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- **Class 1:** Elementary Procedures with response (success and/or failure).
- **Class 2:** Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful:

- A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful:

- A signalling message explicitly indicates that the EP failed.
- On time supervision expiry (i.e. absence of expected response).

Successful and Unsuccessful:

- One signalling message reports both successful and unsuccessful outcome for the different included requests. The response message used is the one defined for successful outcome.

Class 2 EPs are considered always successful.

MCE MBMS M3AP ID: Unique identity, referencing the MBMS-service-associated logical M3-connection within an MCE.

MME MBMS M3AP ID: Unique identity, referencing the MBMS-service-associated logical M3-connection within an MME.

MBMS E-RAB: An MBMS E-RAB refers to the concatenation of an M1 bearer and the corresponding radio bearer, as defined in TS 36.300 [3].

MBMS-service-associated signalling: When M3AP messages associated to one MBMS service uses the MBMS-service-associated logical M3-connection for association of the message to the MBMS service in MCE and EPC.

MBMS-service-associated logical M3-connection: The MBMS-service-associated logical M3-connection uses the identities *MME MBMS M3AP ID* and *MCE MBMS M3AP ID*. For a received MBMS service associated M3AP message the MME identifies the associated MBMS service based on the *MME MBMS M3AP ID IE* and the MCE identifies the associated MBMS service based on the *MCE MBMS M3AP ID IE*.

3.2 Symbols

Not applicable.

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

DL	Downlink
E-RAB	E-UTRAN Radio Access Bearer
eNB	E-UTRAN NodeB
EP	Elementary Procedure
EPC	Evolved Packet Core
E-UTRAN	Evolved UTRAN
GBR	Guaranteed Bit Rate
GTP	GPRS Tunneling Protocol
IE	Information Element
MBMS	Multimedia Broadcast Multicast Service
MBSFN	Multimedia Broadcast multicast service Single Frequency Network
MCE	Multi-cell/multicast Coordination Entity
MME	Mobility Management Entity
NAS	Non-Access Stratum
PLMN	Public Land Mobile Network
QoS	Quality of Service
TEID	Tunnel Endpoint Identifier
UE	User Equipment
UL	Uplink

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the MCE exactly and completely. The EPC functional behaviour is left unspecified.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:

- 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

- 2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure	When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. MBMS procedure.
Message	When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. MESSAGE NAME message.
IE	When referring to an information element (IE) in the specification the <i>Information Element Name</i> is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. <i>Information Element</i> IE.
Value of an IE	When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in subclause 9.2 enclosed by quotation marks, e.g. "Value".

5 M3AP Services

M3AP provides the signalling service between MCE and EPC that is required to fulfil the M3AP functions described in clause 7. M3AP services are defined as

MBMS associated services: They are related to the whole M3 interface instance between the MCE and MME utilising an MBMS associated signalling connection.

Non MBMS associated services: They are related to the whole M3 interface instance between the MCE and MME utilising a Non MBMS associated signalling connection.

6 Services Expected from Signalling Transport

The signalling connection shall provide in sequence delivery of M3AP messages. M3AP shall be notified if the signalling connection breaks.

7 Functions of M3AP

The M3AP protocol provides the following functions:

- Session Management. This overall functionality is responsible for starting, stopping and updating MBMS sessions.
- Reset functionality to ensure a well defined initialisation on the M3 interface.
- Error Indication functionality to allow a proper error reporting/handling in cases where no failure messages are defined.
- M3 Setup functionality for initial M3 interface setup for providing configuration information.
- MCE Configuration Update function is to update application level configuration data needed for the MCE and MME to interoperate correctly on the M3 interface.

The mapping between the above functions and M3 EPs is shown in the table below.

Table 7-1: Mapping between M3AP functions and M3AP EPs

Function	Elementary Procedure(s)
Session Management	a) MBMS Session Start b) MBMS Session Stop c) MBMS Session Update
Error Indication Functionality	Error Indication
Reset Functionality	Reset
M3 Setup	M3 Setup
Configuration Update	MCE Configuration Update

8 M3AP Procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs (see subclause 3.1 for explanation of the different classes):

Table 8-1: Class 1 procedures

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
MBMS Session Start	MBMS SESSION START REQUEST	MBMS SESSION START RESPONSE	MBMS SESSION START FAILURE
MBMS Session Stop	MBMS SESSION STOP REQUEST	MBMS SESSION STOP RESPONSE	
MBMS Session Update	MBMS SESSION UPDATE REQUEST	MBMS SESSION UPDATE RESPONSE	MBMS SESSION UPDATE FAILURE
Reset	RESET	RESET ACKNOWLEDGE	
M3 Setup	M3 SETUP REQUEST	M3 SETUP RESPONSE	M3 SETUP FAILURE
MCE Configuration Update	MCE CONFIGURATION UPDATE	MCE CONFIGURATION UPDATE ACKNOWLEDGE	MCE CONFIGURATION UPDATE FAILURE

Table 8-2: Class 2 procedures

Elementary Procedure	Message
Error Indication	ERROR INDICATION

The following applies concerning interference between Elementary Procedures:

- The Reset procedure takes precedence over all other EPs.

8.2 MBMS Session Start

8.2.1 General

The purpose of the MBMS Session Start procedure is to request the MCE to determine whether an MBMS E-RAB for an upcoming MBMS Session for a given MBMS Bearer Service can be accommodated by the E-UTRAN. The MCE is also requested to establish an MBMS service associated logical M3 connection. The MBMS Session Start procedure is triggered by the EPC (MME).

The procedure uses MBMS Service associated signaling.

8.2.2 Successful Operation

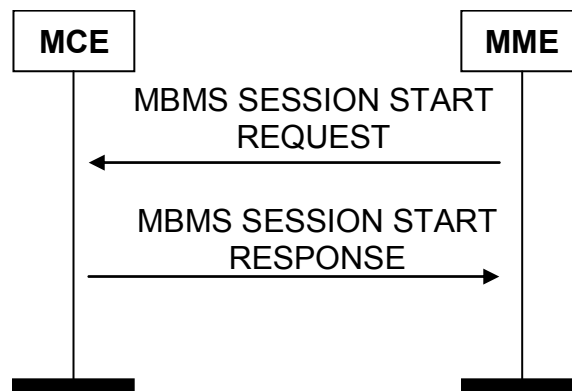


Figure 8.2.2-1: MBMS Session Start procedure. Successful operation.

The MME initiates the procedure by sending an MBMS SESSION START REQUEST message to the MCE.

The MCE shall use the information in the *MBMS E-RAB QoS parameters* IE to determine whether the requested configuration can be accommodated within E-UTRAN.

If the *Time of MBMS Data Transfer* IE is included in the MBMS SESSION START REQUEST message, the MCE shall, if supported, take it into account for the synchronization of the corresponding MCCH Update instead of the *Minimum Time to MBMS Data Transfer* IE. The MCE shall ensure the eNB applies the MCCH update from the last modification period before the time indicated by the *Time of MBMS Data Transfer* IE.

If the MCE receives the MBMS SESSION START REQUEST message including the *Re-establishment* IE for a service which is already ongoing, it shall, if supported, accept this message and replace the MBMS context for that service (see TS 23.007 [14]).

The MCE shall report to the MME, in the MBMS SESSION START RESPONSE message the result of the requested MBMS E-RAB.

The MCE shall establish or modify the resources according to the values of the *Allocation and Retention Priority* IE (priority level and pre-emption indicators) and the resource situation as follows:

- The MCE shall consider the priority level of the requested session, when deciding on the resource allocation.
- The priority levels and the pre-emption indicators may (individually or in combination) be used to determine whether the session has to be started unconditionally and immediately. If the requested session is marked as “may trigger pre-emption” and the resource situation requires so, the MCE may trigger the pre-emption procedure which may then cause the forced release of a lower priority session which is marked as “pre-emptable”. Whilst the process and the extent of the pre-emption procedure is operator-dependent, the pre-emption indicators shall be treated as follows:
 1. If the *Pre-emption Capability* IE is set to “may trigger pre-emption”, then this allocation request is allowed to trigger a pre-emption procedure.
 2. If the *Pre-emption Capability* IE is set to “shall not trigger pre-emption”, then this allocation request is not allowed to trigger a pre-emption procedure.
 3. If the *Pre-emption Vulnerability* IE is set to “pre-emptable”, then this session shall be included in the pre-emption process.
 4. If the *Pre-emption Vulnerability* IE is set to “not pre-emptable”, then this session shall not be included in the pre-emption process.
 5. If the *Priority Level* IE is set to “no priority”, the given values for the *Pre-emption Capability* IE and *Pre-emption Vulnerability* IE shall not be considered. Instead the values “shall not trigger pre-emption” and “not pre-emptable” shall prevail.
- The E-UTRAN pre-emption process shall keep the following rule: E-UTRAN shall only pre-empt sessions with lower priority, in ascending order of priority.

8.2.3 Unsuccessful Operation

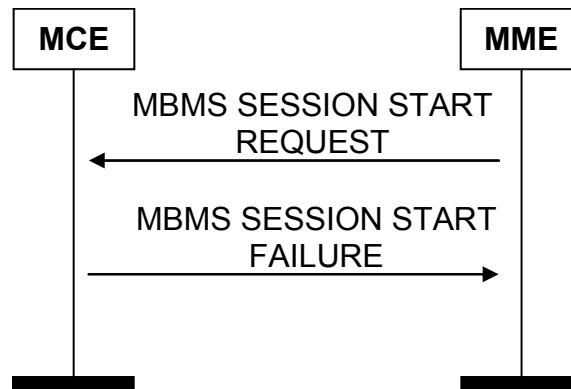


Figure 8.2.3-1: MBMS Session Start procedure. Unsuccessful operation.

If the MCE determines that the E-UTRAN is not able to accommodate the requested configuration for any MBSFN area of the requested service area (e.g. the necessary MBMS resources for the MBMS Session could not be established in any MBSFN area of the requested service area), the MME shall be informed by the MBMS SESSION START FAILURE message including a suitable cause value.

8.2.4 Abnormal Conditions

Not applicable.

8.3 MBMS Session Stop

8.3.1 General

The purpose of the MBMS Session Stop procedure is to inform the MCE about the end of an ongoing MBMS Session for a given MBMS Bearer Service, and that the E-UTRAN releases the allocated MBMS E-RAB resources and that the associated MBMS service associated logical M3 connection is also released. The MBMS Session Stop procedure is triggered by the EPC (MME).

The procedure uses MBMS Service associated signaling.

8.3.2 Successful Operation

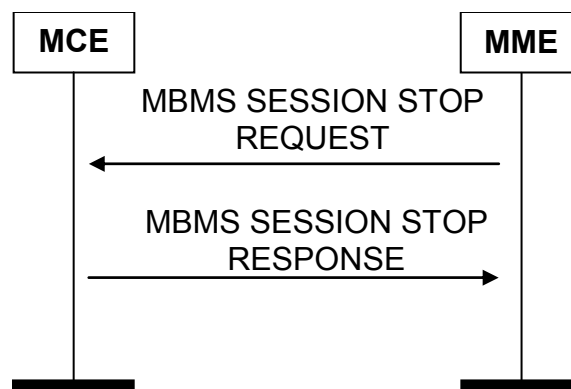


Figure 8.3.2-1: MBMS Session Stop procedure. Successful operation.

The MME initiates the procedure by sending an MBMS SESSION STOP REQUEST message to the MCE. Upon receipt of the MBMS SESSION STOP REQUEST message, the MCE shall send the MBMS SESSION STOP RESPONSE message after the MCE releases the affected resources and removes the MBMS bearer context.

If the *Time of MBMS Data Stop* IE is included in the MBMS SESSION STOP REQUEST message, the MCE shall, if supported, take it into account for the synchronization of the corresponding MCCH Update. The MCE shall ensure the eNB applies the MCCH update from the first modification period after the time indicated by the *Time of MBMS Data Stop* IE.

8.3.3 Unsuccessful Operation

Not applicable.

8.3.4 Abnormal Conditions

Not applicable.

8.4 Error Indication

8.4.1 General

The Error Indication procedure is initiated by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising MBMS-service-associated signalling, then the Error Indication procedure uses MBMS-service-associated signalling. Otherwise the procedure uses non MBMS-service-associated signalling.

8.4.2 Successful Operation

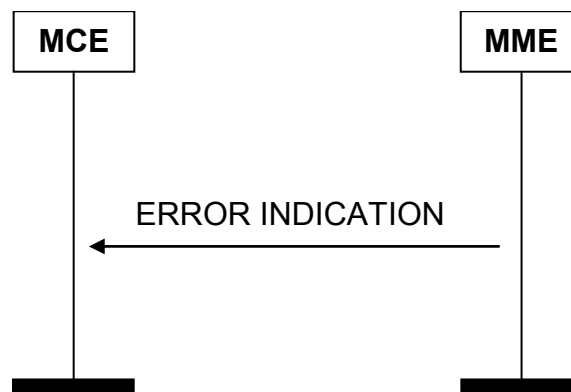


Figure 8.4.2-1. Error Indication procedure, MME originated. Successful operation.

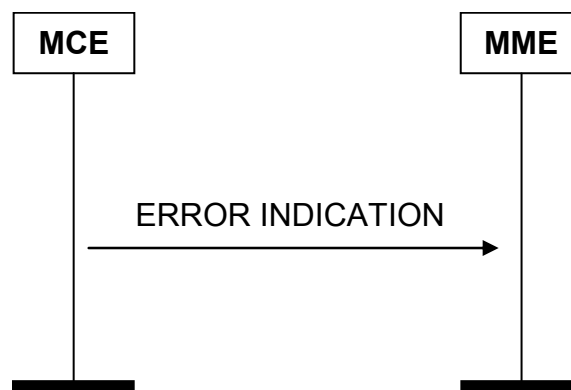


Figure 8.4.2.1-2. Error Indication procedure, MCE originated. Successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause IE* or the *Criticality Diagnostics IE*.

In case the Error Indication procedure is triggered by utilising MBMS-service-associated signalling the *MCE MBMS M3AP ID IE* and the *MME MBMS M3AP IE* shall be included in the ERROR INDICATION message. If one or both of *MCE MBMS M3AP ID IE* and the *MME MBMS M3AP IE* are not correct, the cause shall be set to appropriate value e.g. "Unknown or already allocated MCE MBMS M3AP ID", "Unknown or already allocated MME MBMS M3AP ID" or "Unknown or inconsistent pair of MBMS M3AP ID".

8.4.3 Abnormal Conditions

8.5 Reset

8.5.1 General

The purpose of the Reset procedure is to initialise or re-initialise the E-UTRAN, or part of E-UTRAN M3AP MBMS-related contexts, in the event of a failure in the EPC or vice versa. This procedure does not affect the application level configuration data exchanged during, e.g. the M3 Setup procedure.

The procedure uses non MBMS-service associated signalling.

8.5.2 Successful Operation

8.5.2.1 Reset Procedure Initiated from the MME

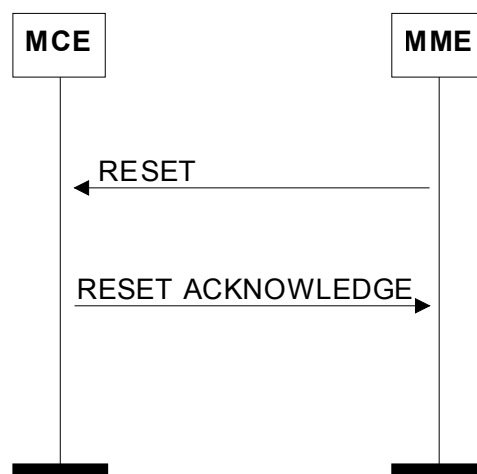


Figure 8.5.2.1-1: Reset procedure initiated from the MME. Successful operation.

In the event of a failure at the MME, which has resulted in the loss of some or all transaction reference information, a RESET message shall be sent to the MCE.

At reception of RESET message the MCE shall release all allocated resources on M3 related to MBMS-service association(s) indicated explicitly or implicitly in the RESET message and remove the MBMS-service contexts including MBMS M3AP IDs for the indicated MBMS service associations.

After the MCE has released all assigned M3 resources and the MBMS M3AP IDs for all indicated MBMS service associations which can be used for new MBMS-service-associated logical M3-connections over the M3 interface, the MCE shall respond with the RESET ACKNOWLEDGE message.

If the RESET message contains the *MBMS-Service-associated logical M3-connection list IE*, then:

- The MCE shall use the *MME MBMS M3AP ID IE* and/or the *MCE MBMS M3AP ID IE* to explicitly identify the MBMS service association(s) to be reset.

- The MCE shall in the RESET ACKNOWLEDGE message include, for each MBMS service association to be reset, the *MBMS-Service-associated logical M3-connection Item* IE in the *MBMS-Service-associated logical M3-connection list* IE. The *MBMS-Service-associated logical M3-connection Item* IEs shall be in the same order as received in the RESET message and shall include also unknown MBMS-Service-associated logical M3-connections. Empty *MBMS-Service-associated logical M3-connection Item* IEs, received in the RESET message, may be omitted in the RESET ACKNOWLEDGE message.
- If the *MME MBMS M3AP ID* IE is included in the *MBMS-Service-associated logical M3-connection Item* IE for an MBMS service association, the MCE shall include the *MME MBMS M3AP ID* IE in the corresponding *MBMS-Service-associated logical M3-connection Item* IE in the RESET ACKNOWLEDGE message.
- If the *MCE MBMS M3AP ID* IE is included in an *MBMS-Service-associated logical M3-connection Item* IE for an MBMS service association, the MCE shall include the *MCE MBMS M3AP ID* IE in the corresponding *MBMS-Service-associated logical M3-connection Item* IE in the RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the RESET message is received, any other ongoing procedure (except another Reset procedure) on the same M3 interface related to an MBMS service association, indicated explicitly or implicitly in the RESET message, shall be aborted.

8.5.2.2 Reset Procedure Initiated from the E-UTRAN

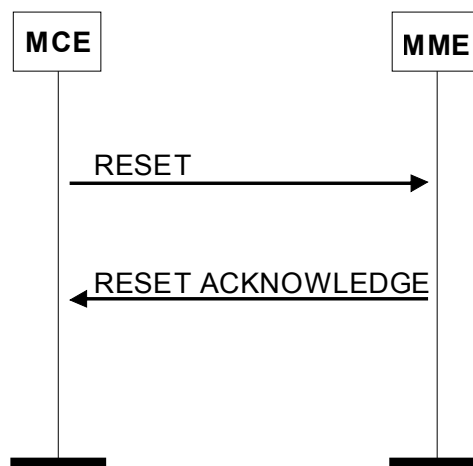


Figure 8.5.2.2-1: Reset procedure initiated from the E-UTRAN. Successful operation.

In the event of a failure at the MCE, which has resulted in the loss of some or all transaction reference information, a RESET message shall be sent to the MME.

At reception of RESET message the MME shall release all allocated resources on M3 related to the MBMS service association(s) indicated explicitly or implicitly in the RESET message and remove the MBMS M3AP ID for the indicated MBMS service associations.

After the MME has released all assigned M3 resources and the MBMS M3AP IDs for all indicated MBMS service associations which can be used for new MBMS-service-associated logical M3-connections over the M3 interface, the MME shall respond with the RESET ACKNOWLEDGE message.

If the RESET message contains the *MBMS-Service-associated logical M3-connection list* IE, then:

- The MME shall use the *MME MBMS M3AP ID* IE and/or the *MCE MBMS M3AP ID* IE to explicitly identify the MBMS service association(s) to be reset.
- The MME shall in the RESET ACKNOWLEDGE message include, for each MBMS service association to be reset, the *MBMS-Service-associated logical M3-connection Item* IE in the *MBMS-Service-associated logical M3-connection list* IE. The *MBMS-Service-associated logical M3-connection Item* IEs shall be in the same order as received in the RESET message and shall include also unknown MBMS-Service-associated logical M3-

connections. Empty *MBMS-Service-associated logical M3-connection Item* IEs, received in the RESET message, may be omitted in the RESET ACKNOWLEDGE message.

- If the *MME MBMS M3AP ID* IE is included in the *MBMS-Service-associated logical M3-connection Item* IE for an MBMS service association, the MME shall include the *MME MBMS M3AP ID* IE in the corresponding *MBMS-Service-associated logical M3-connection Item* IE in the RESET ACKNOWLEDGE message.
- If the *MCE MBMS M3AP ID* IE is included in an *MBMS-Service-associated logical M3-connection Item* IE for an MBMS service association, the MME shall include the *MCE MBMS M3AP ID* IE in the corresponding *MBMS-Service-associated logical M3-connection Item* IE in the RESET ACKNOWLEDGE message.

Interactions with other procedures:

If the RESET message is received, any other ongoing procedure (except another Reset procedure) on the same M3 interface related to an MBMS service association, indicated explicitly or implicitly in the RESET message, shall be aborted.

8.5.3 Abnormal Conditions

8.5.3.1 Abnormal Condition at the EPC

If the RESET message includes the *MBMS-Service-associated logical M3-connection list* IE, but neither the *MME MBMS M3AP ID* IE nor the *MCE MBMS M3AP ID* IE is present for an *MBMS-Service-associated logical M3-connection Item* IE, then the MME shall ignore the *MBMS-Service-associated logical M3-connection Item* IE. The MME may return the empty *MBMS-Service-associated logical M3-connection Item* IE in the *MBMS-Service-associated logical M3-connection list* IE in the RESET ACKNOWLEDGE message.

8.5.3.2 Abnormal Condition at the E-UTRAN

If the RESET message includes the *MBMS-Service-associated logical M3-connection list* IE, but neither the *MME MBMS M3AP ID* IE nor the *MCE MBMS M3AP ID* IE is present for an *MBMS-Service-associated logical M3-connection Item* IE, then the MCE shall ignore the *MBMS-Service-associated logical M3-connection Item* IE. The MCE may return the empty *MBMS-Service-associated logical M3-connection Item* IE in the *MBMS-Service-associated logical M3-connection list* IE in the RESET ACKNOWLEDGE message.

8.5.3.3 Crossing of Reset Messages

If Reset procedure is ongoing in MCE and the MCE receives a RESET message from the peer entity on the same M3 interface related to one or several MBMS service associations previously requested to be reset, indicated explicitly or implicitly in the received RESET message, the MCE shall respond with RESET ACKNOWLEDGE message as described in 8.5.2.1.

If Reset procedure is ongoing in MME and the MME receives a RESET message from the peer entity on the same M3 interface related to one or several MBMS service associations previously requested to be reset, indicated explicitly or implicitly in the received RESET message, the MME shall respond with RESET ACKNOWLEDGE message as described in 8.5.2.2.

8.6 MBMS Session Update

8.6.1 General

The purpose of the MBMS Session Update procedure is to inform the MCE about changing characteristics of the MBMS session.

The procedure uses MBMS-Service-associated signalling.

8.6.2 Successful Operation

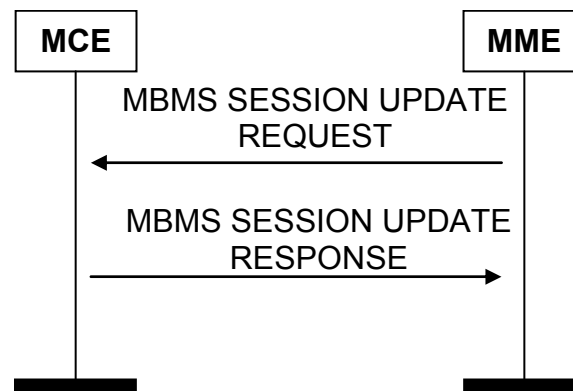


Figure 8.6.2-1. MBMS Session Update procedure. Successful operation.

The MME initiates the procedure by sending an MBMS SESSION UPDATE REQUEST message to the MCE.

The MCE shall use the information contained in the MBMS SESSION UPDATE REQUEST message to update its own parameters of this session such as the service area parameters or the allocation and retention priority (ARP) of the session. If the ARP parameter is updated, the corresponding update of resources shall follow the principles described for the MBMS Session Start procedure. The MCE shall then, if needed, transfer the updated parameters to the involved eNBs according to the service area.

If the *Time of MBMS Data Transfer* IE is included in the MBMS SESSION UPDATE REQUEST message, the MCE shall, if supported, take it into account for the synchronization of the corresponding MCCH Update instead of the *Minimum Time to MBMS Data Transfer* IE. The MCE shall ensure the eNB applies the MCCH update from the last modification period before the time indicated by the *Time of MBMS Data Transfer* IE. The MCE shall ignore the information contained in the received *Minimum Time to MBMS Data Transfer* IE.

After receiving the response from the involved eNBs the MCE shall report to the MME in the MBMS SESSION UPDATE RESPONSE message the result of the update.

8.6.3 Unsuccessful Operation

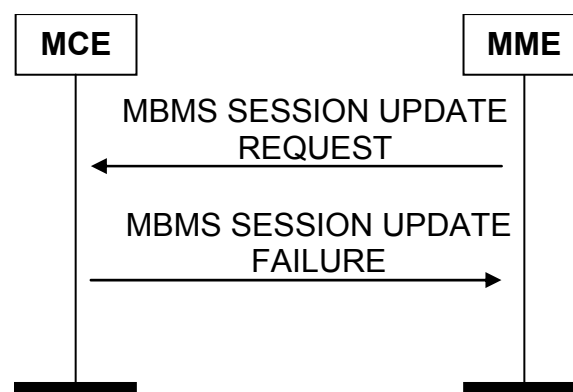


Figure 8.6.3-1: MBMS Session Update procedure. Unsuccessful operation.

If the MCE determines that the E-UTRAN is not able to accommodate the requested updating, the MCE shall send to the MME the MBMS SESSION UPDATE FAILURE message.

8.6.4 Abnormal Conditions

Not applicable.

8.7 M3 Setup

8.7.1 General

The purpose of the M3 Setup procedure is to exchange application level data needed for the MCE and MME to correctly interoperate on the M3 interface. The procedure uses non MBMS-service associated signalling.

This procedure erases any existing application level data in the MCE and the MME and replaces it by the one received. This procedure also re-initialises the E-UTRAN M3AP service-related contexts (if any) and erases all related MBMS-service-associated logical M3 connections in the two nodes like a Reset procedure would do.

8.7.2 Successful Operation

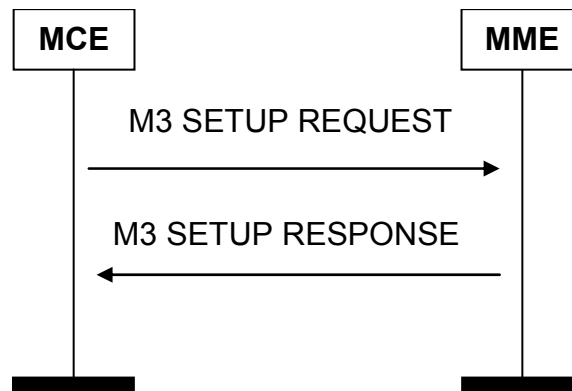


Figure 8.7.2-1: M3 Setup procedure- Successful operation.

The MCE initiates the procedure by sending a M3 SETUP REQUEST message including the appropriate data to the MME. The MME responds with a M3 SETUP RESPONSE.

The exchanged data shall be stored in respective node and used for the duration of the TNL association.

If the M3 SETUP REQUEST message contains the *MCE Name* IE the MME may use this IE as a human readable name of the MCE.

8.7.3 Unsuccessful Operation

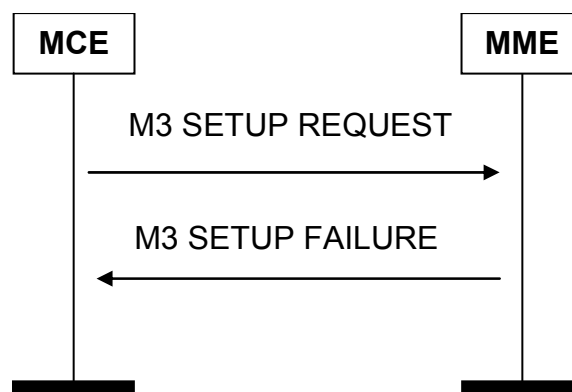


Figure 8.7.3-1: M3 Setup procedure. Unsuccessful operation.

If the MME cannot accept the setup, it should respond with a M3 SETUP FAILURE and appropriate cause value.

If the M3 SETUP FAILURE message includes the *Time To Wait* IE the MCE shall wait at least for the indicated time before reinitiating the M3 setup towards the same MME.

8.7.4 Abnormal Conditions

Void

8.8 MCE Configuration Update

8.8.1 General

The purpose of the MCE Configuration Update procedure is to update application level configuration data needed for the MCE and MME to interoperate correctly on the M3 interface.

The procedure uses non MBMS-service-associated signalling.

8.8.2 Successful Operation

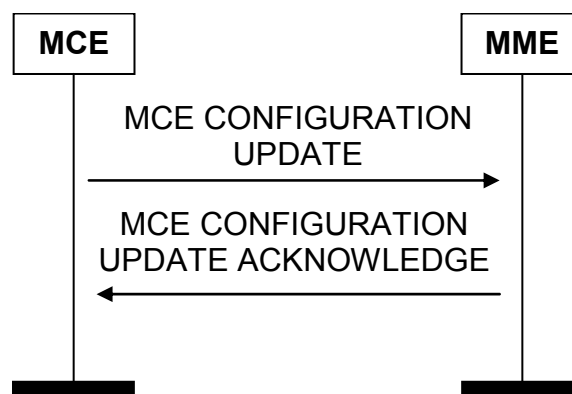


Figure 8.8.2-1: MCE Configuration Update procedure. Successful operation.

The MCE initiates the procedure by sending an MCE CONFIGURATION UPDATE message to the MME including an appropriate set of updated configuration data that it has just taken into operational use. The MME responds with MCE CONFIGURATION UPDATE ACKNOWLEDGE message to acknowledge that it successfully updated the configuration data. If information element(s) is/are not included in the MCE CONFIGURATION UPDATE message, the MME shall interpret that the corresponding configuration data is/are not changed and shall continue to operate the M3 with the existing related configuration data.

If the served MBMS Service Areas are to be updated, the complete set of supported MBMS Service Area Identities shall be included in the *MBMS Service Area List* IE.

If the MCE CONFIGURATION UPDATE message contains the *MCE Name* IE, the MME may use this IE as a human readable name of the MCE.

The updated configuration data shall be stored in both the MCE and the MME and used for the duration of the TNL association or until any further update is triggered by the MCE.

The MCE may initiate a further MCE Configuration Update procedure only after a previous MCE Configuration Update procedure has been completed.

8.8.3 Unsuccessful Operation

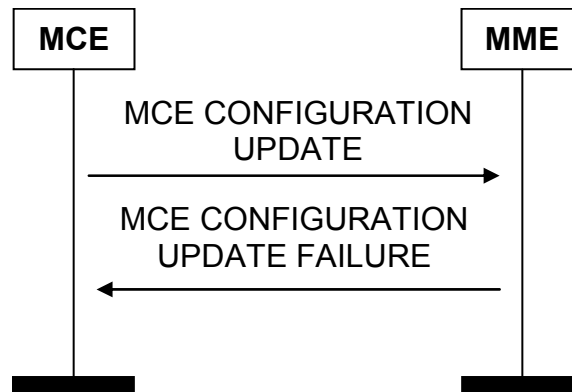


Figure 8.8.3-1: MCE Configuration Update procedure. Unsuccessful operation.

If the MME cannot accept the update, it shall respond with an MCE CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the MCE CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE, the MCE shall wait at least for the indicated time before reinitiating the MCE Configuration Update procedure towards the MME. Both nodes shall continue to operate the M3 interface with their respective configuration data.

8.8.4 Abnormal Conditions

If the MCE after initiating the MCE Configuration Update procedure receives neither an MCE CONFIGURATION UPDATE ACKNOWLEDGE nor an MCE CONFIGURATION UPDATE FAILURE message, the MCE may reinitiate a further MCE Configuration Update procedure towards the same MME, provided that the content of the new MCE CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged MCE CONFIGURATION UPDATE message.

9 Elements for M3AP Communication

9.1 Message Functional Definition and Content

9.1.1 General

Subclauses 9.1 and 9.2 describe the structure of the messages and information elements required for the M3AP protocol in tabular format. Subclause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality.

9.1.2 Message Contents

9.1.2.1 Presence

All information elements in the message descriptions below are marked mandatory, optional or conditional according to table 4.

Table 9-1: Meaning of abbreviations used in M3AP messages

Abbreviation	Meaning
M	IEs marked as Mandatory (M) shall always be included in the message.
O	IEs marked as Optional (O) may or may not be included in the message.
C	IEs marked as Conditional (C) shall be included in a message only if the condition is satisfied. Otherwise the IE shall not be included.

9.1.2.2 Criticality

Each Information Element or Group of Information Elements may have criticality information applied to it. Following cases are possible:

Table 9-2: Meaning of content within "Criticality" column

Abbreviation	Meaning
-	No criticality information is applied explicitly.
YES	Criticality information is applied. This is usable only for non-repeatable IEs
GLOBAL	The IE and all its repetitions together have one common criticality information. This is usable only for repeatable IEs.
EACH	Each repetition of the IE has its own criticality information. It is not allowed to assign different criticality values to the repetitions. This is usable only for repeatable IEs.

9.1.2.3 Range

The Range column indicates the allowed number of copies of repetitive IEs/IE groups.

9.1.2.4 Assigned Criticality

This column provides the actual criticality information as defined in subclause 10.3.2, if applicable.

9.1.3 MBMS SESSION START REQUEST

This message is sent by the MME to establish an MBMS E-RAB and an M3AP signalling connection.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	reject
TMGI	M		9.2.3.3		YES	reject
MBMS Session Identity	O		9.2.3.4		YES	ignore
MBMS E-RAB QoS parameters	M		9.2.1.3		YES	reject
MBMS Session Duration	M		9.2.3.5		YES	reject
MBMS Service Area	M		9.2.3.6		YES	reject
Minimum Time to MBMS Data Transfer	M		9.2.3.8		YES	reject
TNL Information	M				YES	reject
>IP Multicast Address	M		9.2.2.1		-	
>IP Source Address	M		9.2.2.1		-	
>GTP DL TEID	M		GTP TEID 9.2.2.2		-	
Time of MBMS Data Transfer	O		9.2.3.9		YES	ignore
Re-establishment	O		9.2.3.10		YES	ignore

9.1.4 MBMS SESSION START RESPONSE

This message is sent by the MCE to report the successful outcome of the request from the MBMS SESSION START message.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	ignore
MCE MBMS M3AP ID	M		9.2.3.1		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.5 MBMS SESSION START FAILURE

This message is sent by the MCE to report the unsuccessful outcome of the request from the MBMS SESSION START message.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	ignore
Cause	M		9.2.1.2		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.6 MBMS SESSION STOP REQUEST

This message is sent by the MME to release the corresponding MBMS E-RAB and the MBMS service associated logical M3 connection.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	reject
MCE MBMS M3AP ID	M		9.2.3.1		YES	reject
Time of MBMS Data Stop	O		9.2.3.9		YES	ignore

9.1.7 MBMS SESSION STOP RESPONSE

This message is sent by the MCE to acknowledge the MBMS SESSION STOP message.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	ignore
MCE MBMS M3AP ID	M		9.2.3.1		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.8 ERROR INDICATION

This message is sent by both the MME and the MCE and is used to indicate that some error has been detected in the node

Direction: MCE → MME and MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	ignore
MME MBMS M3AP ID	O		9.2.3.2		YES	ignore
MCE MBMS M3AP ID	O		9.2.3.1		YES	ignore
Cause	O		9.2.1.2		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.9 RESET

This message is sent by both the MME and the MCE and is used to request that the M3 interface, or parts of the M3 interface, to be reset.

Direction: MME → MCE and MCE → MME

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Cause	M		9.2.1.2		YES	ignore
CHOICE <i>Reset Type</i>	M				YES	reject
> <i>M3 interface</i>						
>>Reset All	M		ENUMERATED (Reset all, ...)		–	–
> <i>Part of M3 interface</i>						
>> MBMS-Service-associated logical M3-connection list		1			–	–
>>> MBMS-Service - associated logical M3-connection Item		1 to < <i>maxnoofIndividualM3ConnectionsToReset</i> >			EACH	reject
>>>>MME MBMS M3AP ID	O		9.2.3.2		–	–
>>>>MCE MBMS M3AP ID	O		9.2.3.1		–	–

Range bound	Explanation
maxnoofIndividualM3ConnectionsToReset	Maximum no. of MBMS-Service-associated logical M3-connections allowed to reset in one message. Value is 256.

9.1.10 RESET ACKNOWLEDGE

This message is sent by both the MME and the MCE as a response to a RESET message.

Direction: MCE → MME and MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MBMS-Service-associated logical M3-connection list		0..1			YES	ignore
>MBMS-Service - associated logical M3-connection Item		1 to < <i>maxnoofIndividualM3ConnectionsToReset</i> >			EACH	ignore
>>MME MBMS M3AP ID	O		9.2.3.2		–	–
>>MCE MBMS M3AP ID	O		9.2.3.1		–	–
Criticality Diagnostics	O		9.2.1.7		YES	ignore

Range bound	Explanation
maxnoofIndividualM3ConnectionsToReset	Maximum no. of MBMS-Service-associated logical M3-connections allowed to reset in one message. Value is 256.

9.1.11 MBMS SESSION UPDATE REQUEST

This message is sent by the MME to inform the MCE of the changed characteristics of an ongoing MBMS service session.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	reject
MCE MBMS M3AP ID	M		9.2.3.1		YES	reject
TMGI	M		9.2.3.3		YES	reject
MBMS Session Identity	O		9.2.3.4		YES	ignore
MBMS E-RAB QoS parameters	M		9.2.1.3		YES	reject
MBMS Session Duration	M		9.2.3.5		YES	reject
MBMS Service Area	O		9.2.3.6		YES	ignore
Minimum Time to MBMS Data Transfer	M		9.2.3.8		YES	reject
TNL Information	O				YES	ignore
>IP Multicast Address	M		9.2.2.1		-	
>IP Source Address	M		IP Address 9.2.2.1		-	
>GTP DL TEID	M		GTP TEID 9.2.2.2		-	
Time of MBMS Data Transfer	O		9.2.3.9		YES	ignore

9.1.12 MBMS SESSION UPDATE RESPONSE

This message is sent by the MCE to report the successful outcome of the request from the MBMS SESSION UPDATE REQUEST message.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	ignore
MCE MBMS M3AP ID	M		9.2.3.1		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.13 MBMS SESSION UPDATE FAILURE

This message is sent by the MCE to report the unsuccessful outcome of the request from the MBMS SESSION UPDATE REQUEST message.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
MME MBMS M3AP ID	M		9.2.3.2		YES	ignore
MCE MBMS M3AP ID	M		9.2.3.1		YES	ignore
Cause	M		9.2.1.2		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.14 M3 SETUP REQUEST

This message is sent by the MCE to transfer information for a TNL association.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Global MCE ID	M		9.2.1.10		YES	reject
MCE Name	O		PrintableString(SIZE(1...150,...))		YES	ignore
MBMS Service Area List		1			YES	reject
>MBMS Service Area List Item		1 to <maxnoofMBMS ServiceAreaIdentitiesPerMCE>		Supported MBMS Service Area Identities in the MCE	GLOBAL	reject
>>MBMS Service Area 1	M		OCTET STRING(SIZE(2))	MBMS Service Area Identities as defined in TS 23.003 [13].		

Range bound	Explanation
maxnoofMBMSServiceAreaIdentitiesPerMCE	Maximum no. of Service Area Identities per MCE. The value for maxnoofMBMSServiceAreaIdentities is 65536.

9.1.15 M3 SETUP RESPONSE

This message is sent by the MME to transfer information for a TNL association.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.16 M3 SETUP FAILURE

This message is sent by the MME to indicate M3 Setup failure.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Cause	M		9.2.1.2		YES	ignore
Time To Wait	O		9.2.1.9		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.17 MCE CONFIGURATION UPDATE

This message is sent by the MCE transfer updated information for a TNL association.

Direction: MCE → MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Global MCE ID	O		9.2.1.10		YES	reject
MCE Name	O		PrintableString (SIZE(1... 150, ...))		YES	ignore
MBMS Service Area List		<i>0..1</i>			YES	reject
>MBMS Service Area List Item		<i>1 to <maxnoofMBMSServiceAreaIdentitiesPerMCE></i>		Supported MBMS Service Area Identities in the MCE	GLOBAL	reject
>>MBMS Service Area 1	M		OCTET STRING(SIZE(2))	MBMS Service Area Identities as defined in TS 23.003 [13].		

Range bound	Explanation
maxnoofMBMSServiceAreaIdentitiesPerMCE	Maximum no. of Service Area Identities per MCE. The value for maxnoofMBMSServiceAreaIdentities is 65536.

9.1.18 MCE CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by the MME to acknowledge the MCE updated information for a TNL association.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.1.19 MCE CONFIGURATION UPDATE FAILURE

This message is sent by the MME to indicate MCE configuration failure.

Direction: MME → MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	reject
Cause	M		9.2.1.2		YES	ignore
Time To Wait	O		9.2.1.9		YES	ignore
Criticality Diagnostics	O		9.2.1.7		YES	ignore

9.2 Information Element Definitions

9.2.0 General

Subclause 9.2 presents the M3AP IE definitions in tabular format. The corresponding ASN.1 definition is presented in subclause 9.3. In case there is contradiction between the tabular format in subclause 9.2 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

When specifying information elements which are to be represented by bitstrings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bitstrings from other specifications, the first bit of the bitstring contains the first bit of the concerned information;

9.2.1 Radio Network Layer Related IEs

9.2.1.1 Message Type

The *Message Type* IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Message Type				Assumed max no of messages is 256.
>Procedure Code	M		(MBMS Session Start, MBMS Session Stop, MBMS Session Update, Error Indication, Reset, M3 Setup, MCE Configuration Update, ...)	
>Type of Message	M		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome, ...)	

9.2.1.2 Cause

The purpose of the *Cause* IE is to indicate the reason for a particular event for the M3AP protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group	M			
>Radio Network Layer				
>>Radio Network Layer Cause	M		ENUMERATED (Unknown or already allocated MCE MBMS M3AP ID, Unknown or already allocated MME MBMS M3AP ID, Unknown or inconsistent pair of MBMS M3AP IDs, Radio resources not available, Invalid QoS combination, Interaction with other procedure, Not supported QCI value, Unspecified, ...)	
>Transport Layer				
>>Transport Layer Cause	M		ENUMERATED (Transport Resource Unavailable, Unspecified, ...)	
> NAS				
>> NAS Cause	M		ENUMERATED (Unspecified, ...)	
>Protocol				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Abstract Syntax Error (Falsely Constructed Message), Unspecified, ...)	
>Misc				
>>Miscellaneous Cause	M		ENUMERATED (Control Processing Overload, Not enough User Plane Processing Resources, Hardware Failure, O&M Intervention, Unspecified, ...)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Unknown or already allocated MCE MBMS M3AP ID	The action failed because the MCE MBMS M3AP ID is either unknown, or (for a first message received at the MCE) is known and already allocated to an existing MBMS service related context.
Unknown or already allocated MME MBMS M3AP ID	The action failed because the MME MBMS M3AP ID is either unknown, or (for a first message received at the MCE) is known and already allocated to an existing context.
Unknown or inconsistent pair of MBMS M3AP IDs	The action failed because both MBMS M3AP IDs are unknown, or are known but do not define a single MBMS context.
Radio resources not available	No requested radio resources are available.
Invalid QoS combination	The action was failed because of invalid QoS combination.
Interaction with other procedure	The action is due to an ongoing interaction with another procedure.
Not supported QCI Value	The E-RAB setup failed because the requested QCI is not supported.
Unspecified	Sent for radio network layer cause when none of the specified cause values applies.

Transport Layer cause	Meaning
Transport Resource Unavailable	The required transport resources are not available.
Unspecified	Sent for transport network layer cause when none of the specified cause values applies.

NAS cause	Meaning
Unspecified	Sent for NAS cause when none of the specified cause values applies.

Protocol cause	Meaning
Transfer Syntax Error	The received message included a transfer syntax error.
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerning criticality indicated "reject".
Abstract Syntax Error (Ignore And Notify)	The received message included an abstract syntax error and the concerning criticality indicated "ignore and notify".
Message Not Compatible With Receiver State	The received message was not compatible with the receiver state.
Semantic Error	The received message included a semantic error.
Abstract Syntax Error (Falsely Constructed Message)	The received message contained IEs or IE groups in wrong order or with too many occurrences.
Unspecified	Sent for protocol cause when none of the specified cause values applies.

Miscellaneous cause	Meaning
Control Processing Overload	Control processing overload.
Not enough User Plane Processing Resources	No requested user plane resources are available.
Hardware Failure	Action related to hardware failure.
O&M Intervention	The action is due to O&M intervention.
Unspecified Failure	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer, NAS or Protocol.

9.2.1.3 MBMS E-RAB QoS parameters

This IE defines the QoS to be applied to an MBMS E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MBMS E-RAB QoS Parameters						
>QCI	M		INTEGER (0..255)	QoS Class Identifier defined in TS 23.246 [6]. Coding is specified in TS 23.203 [7].		
>GBR QoS Information	O		9.2.1.5	This IE applies to GBR bearers only and shall be ignored otherwise.		
>Allocation and Retention Priority	M		9.2.1.8		YES	ignore

9.2.1.4 Void

9.2.1.5 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR bearer for downlink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBMS E-RAB Maximum Bit Rate Downlink	M		Bit Rate 9.2.1.6	Desc.: This IE indicates the maximum downlink MBMS E-RAB Bit Rate (i.e. from the EPC to E-UTRAN) for this bearer.
MBMS E-RAB Guaranteed Bit Rate Downlink	M		Bit Rate 9.2.1.6	Desc.: This IE indicates the downlink guaranteed MBMS E-RAB Bit Rate (provided that there is data to deliver) from the EPC to the E-UTRAN for this bearer.

9.2.1.6 Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in DL within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR bearer, or an aggregated maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate			INTEGER (0..10,000,000,000)	The unit is: bit/s

9.2.1.7 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the MME or the MCE when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

For further details on how to use the *Criticality Diagnostics* IE, (see section 10).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	O		INTEGER (0..255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error
Triggering Message	O		ENUMERATED(initiating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	O		ENUMERATED(reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		0 to <maxnoof errors>		
>IE Criticality	M		ENUMERATED(reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value 'ignore' shall not be used.
>IE ID	M		INTEGER (0..65535)	The IE ID of the not understood or missing IE
>Type of Error	M		ENUMERATED(not understood, missing, ...)	

Range bound	Explanation
maxnooferrors	Maximum no. of IE errors allowed to be reported with a single message. The value for maxnooferrors is 256.

9.2.1.8 Allocation and Retention Priority

This IE specifies the relative importance of an MBMS E-RAB compared to other MBMS E-RABs for allocation and retention of the MBMS E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Allocation/Retention Priority				
>Priority Level	M		INTEGER (0..15)	Desc.: This IE should be understood as the "priority of allocation and retention" (see TS 23.246 [6]). Usage: Value 15 means "no priority". Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received.
>Pre-emption Capability	M		ENUMERATED(shall not trigger pre-emption, may trigger pre-emption)	This IE indicates the pre-emption capability of the request on other MBMS E-RABs
>Pre-emption Vulnerability	M		ENUMERATED(not pre-emptable, pre-emptable)	This IE indicates the vulnerability of the MBMS E-RAB to preemption of other MBMS E-RABs.

9.2.1.9 Time to Wait

This IE defines the minimum allowed waiting time.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time to Wait	M		ENUMERATED(1s, 2s, 5s, 10s, 20s, 60s, ...)	

9.2.1.10 Global MCE ID

This IE is used to globally identify an MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.3.7	
MCE ID	M		OCTET STRING (SIZE(2))	
MCE ID Extension	O		OCTET STRING (SIZE(1))	Extension of the Global MCE ID.

9.2.2 Transport Network Layer Related IEs

9.2.2.1 IP Address

This information element is an IP address to be used for the user plane transport.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport Layer Address	M		OCTET STRING (SIZE(4..16))	The Radio Network Layer is not supposed to interpret the address information. It should pass it to the transport layer for interpretation. For details on the Transport Layer Address, see ref. TS 36.445 [9].

9.2.2.2 GTP-TEID

This information element is the GTP Tunnel Endpoint Identifier to be used for the user plane transport between eNB and the MBMS-GW.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
GTP TEID	M		OCTET STRING (SIZE(4))	For details and range, see TS 29.281 [12]

9.2.3 NAS Related IEs

9.2.3.1 MCE MBMS M3AP ID

The MCE MBMS M3AP ID uniquely identifies the MBMS Service association over the M3 interface within the MCE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MCE MBMS M3AP ID	M		INTEGER (0 .. 65535)	

9.2.3.2 MME MBMS M3AP ID

The MME MBMS M3AP ID uniquely identifies the MBMS Service association over the M3 interface within the MME.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MME MBMS M3AP ID	M		INTEGER (0 .. 65535)	

9.2.3.3 TMGI

The TMGI uniquely identifies the MBMS Bearer Service.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TMGI				
>PLMN identity	M		9.2.3.7	
>Service ID	M		OCTET STRING (SIZE (3))	

9.2.3.4 MBMS Session Identity

The MBMS Session Identity identifies the session of a MBMS Bearer Service in E-UTRAN and is used by the UE to recognise repetitions of a session.

This IE is transparent to RAN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBMS Session Identity	M		OCTET STRING (SIZE (1))	Coded same way as the MBMS Session Identity IE as defined in TS 29.061 [8].

9.2.3.5 MBMS Session Duration

This IE defines the duration of the MBMS Session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBMS Session Duration	M		OCTET STRING (SIZE (3))	Coded as the value part of MBMS-Session-Duration AVP as defined in TS 29.061 [8].

9.2.3.6 MBMS Service Area

The MBMS Service Area IE consists of a list of one or several MBMS Service Area Identities where each MBMS Service Area Identity is frequency agnostic and can be mapped onto one or more cells.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MBMS Service Area	M		OCTET STRING	Value part coded per MBMS Service Area AVP as defined in TS 29.061 [8].

9.2.3.7 PLMN Identity

This information element indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN identity	M		OCTET STRING (SIZE (3))	<ul style="list-style-type: none"> - digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, - two digits per octet, - bits 4 to 1 of octet n encoding digit 2n-1 - bits 8 to 5 of octet n encoding digit 2n <p>-The Selected PLMN identity consists of 3 digits from MCC followed by either</p> <ul style="list-style-type: none"> -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC).

9.2.3.8 Minimum Time to MBMS Data Transfer

This IE denotes the minimum time occurring between the transmission of the MBMS SESSION START REQUEST message to the MCE and the actual start of the data transfer. The coding of this element is described in TS 48.018 [10].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Minimum Time to MBMS Data Transfer	M		OCTET STRING (SIZE (1))	Coded as the value part of <i>Time to MBMS Data Transfer</i> IE defined in TS 48.018 [10].

9.2.3.9 Absolute Time of MBMS Data

This IE denotes the absolute time of the actual start or stop of the MBMS data transfer.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Absolute Time of MBMS Data	M		BIT STRING (SIZE(64))	Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of $1/2^{32}$ second.

9.2.3.10 Re-establishment

This IE allows identification of the serving MME during some restoration scenarios. Restoration functions are specified in TS 23.007 [14].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Re-establishment	M		ENUMERATED(true, ...)	

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

M3AP ASN.1 definition conforms with ITU-T Rec. X.691 [4] and ITU-T Rec. X.680 [5].

Sub clause 9.3 presents the Abstract Syntax of the M3AP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of M3AP messages. M3AP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct a M3AP message according to the PDU definitions module and with the following additional rules (Note that in the following IE means an IE in the object set with an explicit id. If one IE needed to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If a M3AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

```
-- *****
--
-- Elementary Procedure definitions
```

```
--
-- *****
M3AP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    Criticality,
    ProcedureCode
FROM M3AP-CommonDataTypes

    MBMSSessionStartRequest,
    MBMSSessionStartResponse,
    MBMSSessionStartFailure,
    MBMSSessionStopRequest,
    MBMSSessionStopResponse,
    MBMSSessionUpdateRequest,
    MBMSSessionUpdateResponse,
    MBMSSessionUpdateFailure,
    MCEConfigurationUpdate,
    MCEConfigurationUpdateAcknowledge,
    MCEConfigurationUpdateFailure,
    M3SetupRequest,
    M3SetupResponse,
    M3SetupFailure,
    ErrorIndication,
    Reset,
    ResetAcknowledge,
    PrivateMessage

FROM M3AP-PDU-Contents

    id-mBMSsessionStart,
    id-mBMSsessionStop,
    id-mBMSsessionUpdate,
    id-mCEConfigurationUpdate,
    id-m3Setup,
    id-errorIndication,
    id-Reset,
    id-privateMessage
FROM M3AP-Constants;
```

```

-- *****
--
-- Interface Elementary Procedure Class
--
-- *****

M3AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage          ,
    &SuccessfulOutcome           OPTIONAL,
    &UnsuccessfulOutcome        OPTIONAL,
    &procedureCode               ProcedureCode  UNIQUE,
    &criticality                 Criticality    DEFAULT ignore
}
WITH SYNTAX {
    INITIATING MESSAGE          &InitiatingMessage
    [SUCCESSFUL OUTCOME        &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME      &UnsuccessfulOutcome]
    PROCEDURE CODE             &procedureCode
    [CRITICALITY               &criticality]
}

-- *****
--
-- Interface PDU Definition
--
-- *****

M3AP-PDU ::= CHOICE {
    initiatingMessage    InitiatingMessage,
    successfulOutcome    SuccessfulOutcome,
    unsuccessfulOutcome  UnsuccessfulOutcome,
    ...
}

InitiatingMessage ::= SEQUENCE {
    procedureCode    M3AP-ELEMENTARY-PROCEDURE.&procedureCode    ((M3AP-ELEMENTARY-PROCEDURES)),
    criticality      M3AP-ELEMENTARY-PROCEDURE.&criticality        ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode}),
    value           M3AP-ELEMENTARY-PROCEDURE.&InitiatingMessage  ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode})
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode    M3AP-ELEMENTARY-PROCEDURE.&procedureCode    ((M3AP-ELEMENTARY-PROCEDURES)),
    criticality      M3AP-ELEMENTARY-PROCEDURE.&criticality        ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode}),
    value           M3AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome  ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode})
}

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode    M3AP-ELEMENTARY-PROCEDURE.&procedureCode    ((M3AP-ELEMENTARY-PROCEDURES)),
    criticality      M3AP-ELEMENTARY-PROCEDURE.&criticality        ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode}),
    value           M3AP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ((M3AP-ELEMENTARY-PROCEDURES){@procedureCode})
}

```

```

-- *****
--
-- Interface Elementary Procedure List
--
-- *****

M3AP-ELEMENTARY-PROCEDURES M3AP-ELEMENTARY-PROCEDURE ::= {
    M3AP-ELEMENTARY-PROCEDURES-CLASS-1      |
    M3AP-ELEMENTARY-PROCEDURES-CLASS-2      ,
    ...
}

M3AP-ELEMENTARY-PROCEDURES-CLASS-1 M3AP-ELEMENTARY-PROCEDURE ::= {
    mBMSsessionStart                        |
    mBMSsessionStop                         |
    mBMSsessionUpdate                       |
    reset                                   |
    m3Setup                                  |
    mCEconfigurationUpdate                  ,
    ...
}

M3AP-ELEMENTARY-PROCEDURES-CLASS-2 M3AP-ELEMENTARY-PROCEDURE ::= {
    errorIndication                         |
    privateMessage                          ,
    ...
}

-- *****
--
-- Interface Elementary Procedures
--
-- *****

mBMSsessionStart M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MBMSsessionStartRequest
    SUCCESSFUL OUTCOME      MBMSsessionStartResponse
    UNSUCCESSFUL OUTCOME    MBMSsessionStartFailure
    PROCEDURE CODE          id-mBMSsessionStart
    CRITICALITY             reject
}

mBMSsessionStop M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MBMSsessionStopRequest
    SUCCESSFUL OUTCOME      MBMSsessionStopResponse
    PROCEDURE CODE          id-mBMSsessionStop
    CRITICALITY             reject
}

mBMSsessionUpdate M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MBMSsessionUpdateRequest

```

```

    SUCCESSFUL OUTCOME      MBMSSessionUpdateResponse
    UNSUCCESSFUL OUTCOME    MBMSSessionUpdateFailure
    PROCEDURE CODE          id-mBMSsessionUpdate
    CRITICALITY              reject
}

errorIndication M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      ErrorIndication
    PROCEDURE CODE          id-errorIndication
    CRITICALITY              ignore
}

reset M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      Reset
    SUCCESSFUL OUTCOME      ResetAcknowledge
    PROCEDURE CODE          id-Reset
    CRITICALITY              reject
}

privateMessage M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PrivateMessage
    PROCEDURE CODE          id-privateMessage
    CRITICALITY              ignore
}

mCEConfigurationUpdate M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MCEConfigurationUpdate
    SUCCESSFUL OUTCOME      MCEConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME    MCEConfigurationUpdateFailure
    PROCEDURE CODE          id-mCEConfigurationUpdate
    CRITICALITY              reject
}

m3Setup M3AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      M3SetupRequest
    SUCCESSFUL OUTCOME      M3SetupResponse
    UNSUCCESSFUL OUTCOME    M3SetupFailure
    PROCEDURE CODE          id-m3Setup
    CRITICALITY              reject
}

END

```

9.3.4 PDU Definitions

```

-- *****
--
-- PDU definitions for M3AP.
--

```

```
-- *****
M3AP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS

    Absolute-Time-of-MBMS-Data,
    Cause,
    CriticalityDiagnostics,
    Global-MCE-ID,
    MBMS-E-RAB-QoS-Parameters,
    MBMS-Service-associatedLogicalM3-ConnectionItem,
    MBMS-Service-Area,
    MBMSServiceAreal,
    MBMS-Session-Duration,
    MBMS-Session-ID,
    MCE-MBMS-M3AP-ID,
    MCEname,
    MinimumTimeToMBMSDataTransfer,
    MME-MBMS-M3AP-ID,
    TimeToWait,
    TMGI,
    TNL-Information,
    Reestablishment

FROM M3AP-IEs

    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair{},
    ProtocolIE-ContainerPairList{},
    ProtocolIE-Single-Container{},
    M3AP-PRIVATE-IES,
    M3AP-PROTOCOL-EXTENSION,
    M3AP-PROTOCOL-IES,
    M3AP-PROTOCOL-IES-PAIR
FROM M3AP-Containers

    id-AllocationAndRetentionPriority,
    id-MCE-MBMS-M3AP-ID,
```

```

id-MME-MBMS-M3AP-ID,
id-TMGI,
id-MBMS-Session-ID,
id-MBMS-E-RAB-QoS-Parameters,
id-MBMS-Session-Duration,
id-MBMS-Service-Area,
id-TNL-Information,
id-CriticalityDiagnostics,
id-Cause,
id-MBMS-Service-Area-List,
id-MBMS-Service-Area-List-Item,
id-TimeToWait,
id-ResetType,
id-MBMS-Service-associatedLogicalM3-ConnectionItem,
id-MBMS-Service-associatedLogicalM3-ConnectionListResAck,
id-MBMSServiceAreaList,
id-MinimumTimeToMBMSDataTransfer,
id-Time-ofMBMS-DataStop,
id-Time-ofMBMS-DataTransfer,
id-Global-MCE-ID,
id-MCEname,
id-Reestablishment,
maxnoofMBMSServiceAreaIdentitiesPerMCE,
maxnooferrors,
maxNrOfIndividualM3ConnectionsToReset

FROM M3AP-Constants;

-- *****
--
-- MBMS SESSION START REQUEST
--
-- *****

MBMSSessionStartRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{MBMSSessionStartRequest-IEs}},
    ...
}

MBMSSessionStartRequest-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY reject TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory}|
    { ID id-TMGI                      CRITICALITY reject TYPE TMGI                      PRESENCE mandatory}|
    { ID id-MBMS-Session-ID           CRITICALITY ignore TYPE MBMS-Session-ID           PRESENCE optional}|
    { ID id-MBMS-E-RAB-QoS-Parameters CRITICALITY reject TYPE MBMS-E-RAB-QoS-Parameters PRESENCE mandatory}|
    { ID id-MBMS-Session-Duration     CRITICALITY reject TYPE MBMS-Session-Duration     PRESENCE mandatory}|
    { ID id-MBMS-Service-Area         CRITICALITY reject TYPE MBMS-Service-Area         PRESENCE mandatory}|
    { ID id-MinimumTimeToMBMSDataTransfer CRITICALITY reject TYPE MinimumTimeToMBMSDataTransfer PRESENCE mandatory}|
    { ID id-TNL-Information           CRITICALITY reject TYPE TNL-Information           PRESENCE mandatory}|
    { ID id-Time-ofMBMS-DataTransfer  CRITICALITY ignore TYPE Absolute-Time-ofMBMS-Data PRESENCE optional}|
    { ID id-Reestablishment           CRITICALITY ignore TYPE Reestablishment           PRESENCE optional},
    ...
}

```

```

-- *****
--
-- MBMS SESSION START RESPONSE
--
-- *****

MBMSSessionStartResponse ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{ MBMSSessionStartResponse-IEs}},
    ...
}

MBMSSessionStartResponse-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory } |
    { ID id-MCE-MBMS-M3AP-ID          CRITICALITY ignore TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics    CRITICALITY ignore TYPE CriticalityDiagnostics    PRESENCE optional  },
    ...
}

-- *****
--
-- MBMS SESSION START FAILURE
--
-- *****

MBMSSessionStartFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{ MBMSSessionStartFailure-IEs}},
    ...
}

MBMSSessionStartFailure-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory } |
    { ID id-Cause                    CRITICALITY ignore TYPE Cause                    PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics    CRITICALITY ignore TYPE CriticalityDiagnostics    PRESENCE optional  },
    ...
}

-- *****
--
-- MBMS SESSION STOP REQUEST
--
-- *****

MBMSSessionStopRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{MBMSSessionStopRequest-IEs}},
    ...
}

MBMSSessionStopRequest-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY reject TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory}|
    { ID id-MCE-MBMS-M3AP-ID          CRITICALITY reject TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory}|
    { ID id-Time-ofMBMS-DataStop      CRITICALITY ignore TYPE Absolute-Time-ofMBMS-Data      PRESENCE optional},
}

```



```

...
}
-- *****
--
-- MBMS SESSION STOP RESPONSE
--
-- *****

MBMSSessionStopResponse ::= SEQUENCE {
    protocolIEs                ProtocolIE-Container    {{ MBMSSessionStopResponse-IEs}},
    ...
}

MBMSSessionStopResponse-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory } |
    { ID id-MCE-MBMS-M3AP-ID          CRITICALITY ignore TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics    CRITICALITY ignore TYPE CriticalityDiagnostics    PRESENCE optional  } ,
    ...
}

-- *****
--
-- MBMS SESSION UPDATE REQUEST
--
-- *****

MBMSSessionUpdateRequest ::= SEQUENCE {
    protocolIEs                ProtocolIE-Container    {{MBMSSessionUpdateRequest-IEs}},
    ...
}

MBMSSessionUpdateRequest-IEs M3AP-PROTOCOL-IES ::= {
    { ID id-MME-MBMS-M3AP-ID          CRITICALITY reject TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory}|
    { ID id-MCE-MBMS-M3AP-ID          CRITICALITY reject TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory}|
    { ID id-TMGI                      CRITICALITY reject TYPE TMGI                      PRESENCE mandatory}|
    { ID id-MBMS-Session-ID           CRITICALITY ignore TYPE MBMS-Session-ID           PRESENCE optional}|
    { ID id-MBMS-E-RAB-QoS-Parameters CRITICALITY reject TYPE MBMS-E-RAB-QoS-Parameters PRESENCE mandatory}|
    { ID id-MBMS-Session-Duration     CRITICALITY reject TYPE MBMS-Session-Duration     PRESENCE mandatory}|
    { ID id-MBMS-Service-Area         CRITICALITY ignore TYPE MBMS-Service-Area         PRESENCE optional}|
    { ID id-MinimumTimeToMBMSDataTransfer CRITICALITY reject TYPE MinimumTimeToMBMSDataTransfer PRESENCE mandatory}|
    { ID id-TNL-Information           CRITICALITY ignore TYPE TNL-Information           PRESENCE optional}|
    { ID id-Time-ofMBMS-DataTransfer  CRITICALITY ignore TYPE Absolute-Time-ofMBMS-Data PRESENCE optional},
    ...
}

-- *****
--
-- MBMS SESSION UPDATE RESPONSE
--
-- *****

MBMSSessionUpdateResponse ::= SEQUENCE {

```

```

    protocolIEs          ProtocolIE-Container    {{ MBMSsessionUpdateResponse-IEs}},
    ...
}

MBMSsessionUpdateResponse-IEs M3AP-PROTOCOL-IES ::= {
  { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory } |
  { ID id-MCE-MBMS-M3AP-ID          CRITICALITY ignore TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory } |
  { ID id-CriticalityDiagnostics     CRITICALITY ignore TYPE CriticalityDiagnostics     PRESENCE optional  },
  ...
}

-- *****
--
-- MBMS SESSION UPDATE FAILURE
--
-- *****

MBMSsessionUpdateFailure ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    {{ MBMSsessionUpdateFailure-IEs}},
  ...
}

MBMSsessionUpdateFailure-IEs M3AP-PROTOCOL-IES ::= {
  { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE mandatory } |
  { ID id-MCE-MBMS-M3AP-ID          CRITICALITY ignore TYPE MCE-MBMS-M3AP-ID          PRESENCE mandatory } |
  { ID id-Cause                     CRITICALITY ignore TYPE Cause                     PRESENCE mandatory } |
  { ID id-CriticalityDiagnostics     CRITICALITY ignore TYPE CriticalityDiagnostics     PRESENCE optional  },
  ...
}

-- *****
--
-- ERROR INDICATION
--
-- *****

ErrorIndication ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    {{ErrorIndication-IEs}},
  ...
}

ErrorIndication-IEs M3AP-PROTOCOL-IES ::= {
  { ID id-MME-MBMS-M3AP-ID          CRITICALITY ignore TYPE MME-MBMS-M3AP-ID          PRESENCE optional } |
  { ID id-MCE-MBMS-M3AP-ID          CRITICALITY ignore TYPE MCE-MBMS-M3AP-ID          PRESENCE optional } |
  { ID id-Cause                     CRITICALITY ignore TYPE Cause                     PRESENCE optional } |
  { ID id-CriticalityDiagnostics     CRITICALITY ignore TYPE CriticalityDiagnostics     PRESENCE optional  },
  ...
}

-- *****
--
-- Reset

```

```

--
-- *****
Reset ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {ResetIEs} },
    ...
}

ResetIEs M3AP-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore TYPE Cause          PRESENCE mandatory }|
    { ID id-ResetType     CRITICALITY reject TYPE ResetType      PRESENCE mandatory },
    ...
}

ResetType ::= CHOICE {
    m3-Interface          ResetAll,
    partOfM3-Interface    MBMS-Service-associatedLogicalM3-ConnectionListRes,
    ...
}

ResetAll ::= ENUMERATED {
    reset-all,
    ...
}

MBMS-Service-associatedLogicalM3-ConnectionListRes ::= SEQUENCE (SIZE(1.. maxNrOfIndividualM3ConnectionsToReset)) OF ProtocolIE-Single-Container
{ { MBMS-Service-associatedLogicalM3-ConnectionItemRes } }

MBMS-Service-associatedLogicalM3-ConnectionItemRes M3AP-PROTOCOL-IES ::= {
    { ID id-MBMS-Service-associatedLogicalM3-ConnectionItem CRITICALITY reject TYPE MBMS-Service-associatedLogicalM3-ConnectionItem PRESENCE
mandatory },
    ...
}

-- *****
--
-- Reset Acknowledge
--
-- *****

ResetAcknowledge ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {ResetAcknowledgeIEs} },
    ...
}

ResetAcknowledgeIEs M3AP-PROTOCOL-IES ::= {
    { ID id-MBMS-Service-associatedLogicalM3-ConnectionListResAck          CRITICALITY ignore TYPE MBMS-Service-associatedLogicalM3-
ConnectionListResAck          PRESENCE optional }|
    { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

```

```

}

MBMS-Service-associatedLogicalM3-ConnectionListResAck ::= SEQUENCE (SIZE(1.. maxNrOfIndividualM3ConnectionsToReset)) OF ProtocolIE-Single-Container
{ { MBMS-Service-associatedLogicalM3-ConnectionItemResAck } }

MBMS-Service-associatedLogicalM3-ConnectionItemResAck M3AP-PROTOCOL-IES ::= {
  { ID id-MBMS-Service-associatedLogicalM3-ConnectionItem CRITICALITY ignore TYPE MBMS-Service-associatedLogicalM3-ConnectionItem PRESENCE
mandatory },
  ...
}

-- *****
--
-- PRIVATE MESSAGE
--
-- *****

PrivateMessage ::= SEQUENCE {
  privateIEs PrivateIE-Container {{PrivateMessage-IEs}},
  ...
}

PrivateMessage-IEs M3AP-PRIVATE-IES ::= {
  ...
}

-- *****
--
-- M3 SETUP ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- M3 Setup Request
--
-- *****

M3SetupRequest ::= SEQUENCE {
  protocolIEs ProtocolIE-Container { {M3SetupRequestIEs} },
  ...
}

M3SetupRequestIEs M3AP-PROTOCOL-IES ::= {
  { ID id-Global-MCE-ID CRITICALITY reject TYPE Global-MCE-ID PRESENCE mandatory}|
  { ID id-MCName CRITICALITY ignore TYPE MCName PRESENCE optional}|
  { ID id-MBMSServiceAreaList CRITICALITY reject TYPE MBMSServiceAreaListItem PRESENCE mandatory},
  ...
}

MBMSServiceAreaListItem ::= SEQUENCE (SIZE(1..maxnoofMBMSServiceAreaIdentitiesPerMCE)) OF MBMSServiceAreaList

```

```

-- *****
--
-- M3 Setup Response
--
-- *****

M3SetupResponse ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {M3SetupResponseIEs} },
    ...
}

M3SetupResponseIEs M3AP-PROTOCOL-IES ::= {
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics      PRESENCE optional},
    ...
}

-- *****
--
-- M3 Setup Failure
--
-- *****

M3SetupFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {M3SetupFailureIEs} },
    ...
}

M3SetupFailureIEs M3AP-PROTOCOL-IES ::= {
    { ID id-Cause                CRITICALITY ignore  TYPE Cause                PRESENCE mandatory}|
    { ID id-TimeToWait           CRITICALITY ignore  TYPE TimeToWait           PRESENCE optional}|
    { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
    ...
}

-- *****
--
-- MCE CONFIGURATION UPDATE ELEMENTARY PROCEDURE
--
-- *****

-- *****
--
-- MCE Configuration Update
--
-- *****

MCEConfigurationUpdate ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { {MCEConfigurationUpdateIEs} },
    ...
}

```

```

MCEConfigurationUpdateIEs M3AP-PROTOCOL-IES ::= {
  { ID id-Global-MCE-ID          CRITICALITY reject  TYPE Global-MCE-ID          PRESENCE optional}|
  { ID id-MCENAME                 CRITICALITY ignore  TYPE MCENAME                 PRESENCE optional}|
  { ID id-MBMSServiceAreaList     CRITICALITY reject  TYPE MBMSServiceAreaListItem PRESENCE optional},
  ...
}

-- *****
--
-- MCE Configuration Update Acknowledge
--
-- *****

MCEConfigurationUpdateAcknowledge ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    { {MCEConfigurationUpdateAcknowledgeIEs} },
  ...
}

MCEConfigurationUpdateAcknowledgeIEs M3AP-PROTOCOL-IES ::= {
  { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional  },
  ...
}

-- *****
--
-- MCE Configuration Update Failure
--
-- *****

MCEConfigurationUpdateFailure ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    { {MCEConfigurationUpdateFailureIEs} },
  ...
}

MCEConfigurationUpdateFailureIEs M3AP-PROTOCOL-IES ::= {
  { ID id-Cause                 CRITICALITY ignore  TYPE Cause                 PRESENCE mandatory}|
  { ID id-TimeToWait            CRITICALITY ignore  TYPE TimeToWait            PRESENCE optional}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

END

```

9.3.5 Information Element definitions

```

-- *****
--
-- Information Element Definitions

```

```

--
-- *****
M3AP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-IEs (2) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    id-AllocationAndRetentionPriority,
    maxnooferrors

FROM M3AP-Constants

    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM M3AP-CommonDataTypes

    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    M3AP-PROTOCOL-EXTENSION,
    M3AP-PROTOCOL-IES
FROM M3AP-Containers;

-- A

Absolute-Time-ofMBMS-Data          ::= BIT STRING (SIZE (64))

AllocationAndRetentionPriority ::= SEQUENCE {
    priorityLevel          PriorityLevel,
    pre-emptionCapability  Pre-emptionCapability,
    pre-emptionVulnerability Pre-emptionVulnerability,
    iE-Extensions          ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL
}

AllocationAndRetentionPriority-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

-- B

BitRate ::= INTEGER (0..10000000000)

-- C

Cause ::= CHOICE {
    radioNetwork      CauseRadioNetwork,
    transport          CauseTransport,
    nAS                CauseNAS,
}

```

```

    protocol          CauseProtocol,
    misc              CauseMisc,
    ...
}

CauseMisc ::= ENUMERATED {
    control-processing-overload,
    not-enough-user-plane-processing-resources,
    hardware-failure,
    om-intervention,
    unspecified,
    ...
}

CauseNAS ::= ENUMERATED {
    unspecified,
    ...
}

CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    abstract-syntax-error-falsely-constructed-message,
    unspecified,
    ...
}

CauseRadioNetwork ::= ENUMERATED {
    unknown-or-already-allocated-MME-MBMS-M3AP-ID,
    unknown-or-already-allocated-MCE-MBMS-M3AP-ID,
    unknown-or-inconsistent-pair-of-MBMS-M3AP-IDs,
    radio-resources-not-available,
    invalid-QoS-combination,
    interaction-with-other-procedure,
    not-supported-QCI-value,
    unspecified,
    ...
}

CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    ...
}

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode          ProcedureCode          OPTIONAL,
    triggeringMessage      TriggeringMessage      OPTIONAL,
    procedureCriticality   Criticality             OPTIONAL,

```



```

    iEsCriticalityDiagnostics      CriticalityDiagnostics-IE-List OPTIONAL,
    iE-Extensions                  ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} } OPTIONAL,
    ...
}

CriticalityDiagnostics-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxnooferrors)) OF
    SEQUENCE {
        iECriticality              Criticality,
        iE-ID                      ProtocolIE-ID,
        typeOfError                TypeOfError,
        iE-Extensions              ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
        ...
    }

CriticalityDiagnostics-IE-List-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

-- D
-- E

ExtendedMCE-ID ::= OCTET STRING (SIZE(1))

-- F
-- G

Global-MCE-ID ::= SEQUENCE {
    pLMN-Identity                 PLMN-Identity,
    mCE-ID                        MCE-ID,
    extendedMCE-ID                ExtendedMCE-ID OPTIONAL,
    iE-Extensions                 ProtocolExtensionContainer { {GlobalMCE-ID-ExtIEs} } OPTIONAL,
    ...
}

GlobalMCE-ID-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

GBR-QosInformation ::= SEQUENCE {
    mBMS-E-RAB-MaximumBitrateDL   BitRate,
    mBMS-E-RAB-GuaranteedBitrateDL BitRate,
    iE-Extensions                 ProtocolExtensionContainer { {GBR-QosInformation-ExtIEs} } OPTIONAL,
    ...
}

GBR-QosInformation-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

```

```
}
GTP-TEID ::= OCTET STRING (SIZE (4))

-- H
-- I

IPAddress ::= OCTET STRING (SIZE(4..16, ...))

-- J
-- K
-- L
-- M

MBMS-E-RAB-QoS-Parameters ::= SEQUENCE {
    qCI QCI,
    gbrQoSInformation GBR-QoSInformation OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { MBMS-E-RAB-QoS-Parameters-ExtIEs} } OPTIONAL,
    ...
}

MBMS-E-RAB-QoS-Parameters-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
-- Extension for Release 10 ARP support --
    {ID id-AllocationAndRetentionPriority CRITICALITY ignore EXTENSION AllocationAndRetentionPriority PRESENCE mandatory},
    ...
}

MBMS-Service-associatedLogicalM3-ConnectionItem ::= SEQUENCE {
    mME-MBMS-M3AP-ID MME-MBMS-M3AP-ID OPTIONAL,
    mCE-MBMS-M3AP-ID MCE-MBMS-M3AP-ID OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { MBMS-Service-associatedLogicalM3-ConnectionItemExtIEs} } OPTIONAL,
    ...
}

MBMS-Service-associatedLogicalM3-ConnectionItemExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

MBMSServiceArea ::= OCTET STRING (SIZE (2))

MBMS-Service-Area ::= OCTET STRING

MBMS-Session-Duration ::= OCTET STRING (SIZE (3))

MBMS-Session-ID ::= OCTET STRING (SIZE (1))

MCE-MBMS-M3AP-ID ::= INTEGER (0..65535)

MCE-ID ::= OCTET STRING (SIZE(2))
```

```
MCENAME ::= PrintableString (SIZE (1..150,...))

MinimumTimeToMBMSDataTransfer ::= OCTET STRING (SIZE (1))

MME-MBMS-M3AP-ID ::= INTEGER (0..65535)

-- N
-- O
-- P

Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption
}

Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable
}

PriorityLevel ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)

PLMN-Identity ::= OCTET STRING (SIZE(3))

-- Q

QCI ::= INTEGER (0..255)

-- R

Reestablishment ::= ENUMERATED {true, ...}

-- S
-- T

TimeToWait ::= ENUMERATED {v1s, v2s, v5s, v10s, v20s, v60s, ...}

TMGI ::= SEQUENCE {
    pLMNIdentity          PLMN-Identity,
    serviceID             OCTET STRING (SIZE (3)),
    iE-Extensions        ProtocolExtensionContainer { {TMGI-ExtIEs} } OPTIONAL
}

TMGI-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

TNL-Information ::= SEQUENCE {
    iPMCAAddress          IPAddress,
    iPSourceAddress       IPAddress,
    gTP-DLTEID           GTP-TEID,
    iE-Extensions        ProtocolExtensionContainer { {TNL-Information-ExtIEs} } OPTIONAL,
```

```

    ...
}

TNL-Information-ExtIEs M3AP-PROTOCOL-EXTENSION ::= {
    ...
}

TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    ...
}

-- U
-- V
-- W
-- X
-- Y
-- Z

END

```

9.3.6 Common definitions

```

-- *****
--
-- Common definitions
--
-- *****

M3AP-CommonDataTypes {
    itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
    eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-CommonDataTypes (3) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- Extension constants
--
-- *****

maxPrivateIEs                INTEGER ::= 65535
maxProtocolExtensions        INTEGER ::= 65535
maxProtocolIEs               INTEGER ::= 65535

-- *****

```

```

--
-- Common Data Types
--
-- *****
Criticality      ::= ENUMERATED { reject, ignore, notify }

Presence        ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID    ::= CHOICE {
    local          INTEGER (0.. maxPrivateIEs),
    global         OBJECT IDENTIFIER
}

ProcedureCode   ::= INTEGER (0..255)

ProtocolIE-ID   ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}

END

```

9.3.7 Constant definitions

```

-- *****
--
-- Constant definitions
--
-- *****

M3AP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-Constants (4) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    ProcedureCode,
    ProtocolIE-ID
FROM M3AP-CommonDataTypes;

-- *****
--
-- Elementary Procedures
--
-- *****

```

```

id-mBMSsessionStart      ProcedureCode ::= 0
id-mBMSsessionStop       ProcedureCode ::= 1
id-errorIndication        ProcedureCode ::= 2
id-privateMessage         ProcedureCode ::= 3
id-Reset                  ProcedureCode ::= 4
id-mBMSsessionUpdate      ProcedureCode ::= 5
id-mCEConfigurationUpdate ProcedureCode ::= 6
id-m3Setup                 ProcedureCode ::= 7

-- *****
--
-- Lists
--
-- *****

maxnoofMBMSServiceAreaIdentitiesPerMCE    INTEGER ::= 65536
maxnooferrors                              INTEGER ::= 256
maxNrOfIndividualM3ConnectionsToReset      INTEGER ::= 256

-- *****
--
-- IEs
--
-- *****

id-MME-MBMS-M3AP-ID          ProtocolIE-ID ::= 0
id-MCE-MBMS-M3AP-ID          ProtocolIE-ID ::= 1
id-TMGI                      ProtocolIE-ID ::= 2
id-MBMS-Session-ID           ProtocolIE-ID ::= 3
id-MBMS-E-RAB-QoS-Parameters ProtocolIE-ID ::= 4
id-MBMS-Session-Duration     ProtocolIE-ID ::= 5
id-MBMS-Service-Area         ProtocolIE-ID ::= 6
id-TNL-Information           ProtocolIE-ID ::= 7
id-CriticalityDiagnostics    ProtocolIE-ID ::= 8
id-Cause                     ProtocolIE-ID ::= 9
id-MBMS-Service-Area-List    ProtocolIE-ID ::= 10
id-MBMS-Service-Area-List-Item ProtocolIE-ID ::= 11
id-TimeToWait                ProtocolIE-ID ::= 12
id-ResetType                 ProtocolIE-ID ::= 13
id-MBMS-Service-associatedLogicalM3-ConnectionItem ProtocolIE-ID ::= 14
id-MBMS-Service-associatedLogicalM3-ConnectionListResAck ProtocolIE-ID ::= 15
id-MinimumTimeToMBMSDataTransfer ProtocolIE-ID ::= 16
id-AllocationAndRetentionPriority ProtocolIE-ID ::= 17
id-Global-MCE-ID             ProtocolIE-ID ::= 18
id-MCEname                   ProtocolIE-ID ::= 19
id-MBMSServiceAreaList       ProtocolIE-ID ::= 20
id-Time-ofMBMS-DataTransfer   ProtocolIE-ID ::= 21
id-Time-ofMBMS-DataStop      ProtocolIE-ID ::= 22
id-Reestablishment           ProtocolIE-ID ::= 23
END

```

9.3.8 Container definitions

```

-- *****
--
-- Container definitions
--
-- *****

M3AP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) m3ap (5) version1 (1) m3ap-Containers (5) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs,
    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolIE-ID
FROM M3AP-CommonDataTypes;

-- *****
--
-- Class Definition for Protocol IEs
--
-- *****

M3AP-PROTOCOL-IES ::= CLASS {
    &id          ProtocolIE-ID          UNIQUE,
    &criticality Criticality,
    &Value,
    &presence    Presence
}
WITH SYNTAX {
    ID          &id
    CRITICALITY &criticality
    TYPE        &Value
    PRESENCE    &presence

```

```

}
-- *****
--
-- Class Definition for Protocol IEs
--
-- *****

M3AP-PROTOCOL-IES-PAIR ::= CLASS {
    &id                ProtocolIE-ID        UNIQUE,
    &firstCriticality  Criticality,
    &FirstValue,
    &secondCriticality Criticality,
    &SecondValue,
    &presence          Presence
}
WITH SYNTAX {
    ID                &id
    FIRST CRITICALITY &firstCriticality
    FIRST TYPE        &FirstValue
    SECOND CRITICALITY &secondCriticality
    SECOND TYPE       &SecondValue
    PRESENCE          &presence
}

-- *****
--
-- Class Definition for Protocol Extensions
--
-- *****

M3AP-PROTOCOL-EXTENSION ::= CLASS {
    &id                ProtocolIE-ID        UNIQUE,
    &criticality       Criticality,
    &Extension,
    &presence          Presence
}
WITH SYNTAX {
    ID                &id
    CRITICALITY       &criticality
    EXTENSION         &Extension
    PRESENCE          &presence
}

-- *****
--
-- Class Definition for Private IEs
--
-- *****

M3AP-PRIVATE-IES ::= CLASS {
    &id                PrivateIE-ID,
    &criticality       Criticality,

```



```

    &Value,
    &presence           Presence
}
WITH SYNTAX {
    ID                 &id
    CRITICALITY       &criticality
    TYPE              &Value
    PRESENCE          &presence
}

-- *****
--
-- Container for Protocol IEs
--
-- *****

ProtocolIE-Container {M3AP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
        ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Single-Container {M3AP-PROTOCOL-IES : IEsSetParam} ::=
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Field {M3AP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
    id                 M3AP-PROTOCOL-IES.&id                {{IEsSetParam}},
    criticality        M3AP-PROTOCOL-IES.&criticality        {{IEsSetParam}}{@id},
    value              M3AP-PROTOCOL-IES.&Value              {{IEsSetParam}}{@id}
}

-- *****
--
-- Container for Protocol IE Pairs
--
-- *****

ProtocolIE-ContainerPair {M3AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
        ProtocolIE-FieldPair {{IEsSetParam}}

ProtocolIE-FieldPair {M3AP-PROTOCOL-IES-PAIR : IEsSetParam} ::= SEQUENCE {
    id                 M3AP-PROTOCOL-IES-PAIR.&id            {{IEsSetParam}},
    firstCriticality   M3AP-PROTOCOL-IES-PAIR.&firstCriticality {{IEsSetParam}}{@id},
    firstValue         M3AP-PROTOCOL-IES-PAIR.&FirstValue     {{IEsSetParam}}{@id},
    secondCriticality  M3AP-PROTOCOL-IES-PAIR.&secondCriticality {{IEsSetParam}}{@id},
    secondValue        M3AP-PROTOCOL-IES-PAIR.&SecondValue    {{IEsSetParam}}{@id}
}

-- *****
--
-- Container Lists for Protocol IE Containers
--
-- *****

```

```

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, M3AP-PROTOCOL-IES : IEsSetParam} ::=
  SEQUENCE (SIZE (lowerBound..upperBound)) OF
    ProtocolIE-Container {{IEsSetParam}}

ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, M3AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
  SEQUENCE (SIZE (lowerBound..upperBound)) OF
    ProtocolIE-ContainerPair {{IEsSetParam}}

-- *****
--
-- Container for Protocol Extensions
--
-- *****

ProtocolExtensionContainer {M3AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
  SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
    ProtocolExtensionField {{ExtensionSetParam}}

ProtocolExtensionField {M3AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
  id                M3AP-PROTOCOL-EXTENSION.&id                {{ExtensionSetParam}},
  criticality       M3AP-PROTOCOL-EXTENSION.&criticality        {{ExtensionSetParam}}{@id}},
  extensionValue    M3AP-PROTOCOL-EXTENSION.&Extension          {{ExtensionSetParam}}{@id}}
}

-- *****
--
-- Container for Private IEs
--
-- *****

PrivateIE-Container {M3AP-PRIVATE-IES : IEsSetParam} ::=
  SEQUENCE (SIZE (1..maxPrivateIEs)) OF
    PrivateIE-Field {{IEsSetParam}}

PrivateIE-Field {M3AP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
  id                M3AP-PRIVATE-IES.&id                {{IEsSetParam}},
  criticality       M3AP-PRIVATE-IES.&criticality        {{IEsSetParam}}{@id}},
  value            M3AP-PRIVATE-IES.&Value              {{IEsSetParam}}{@id}}
}

END

```

9.4 Message Transfer Syntax

M3AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax as specified in ref. ITU-T Rec. X.691 [4].

9.5 Timers

10 Handling of Unknown, Unforeseen and Erroneous Protocol Data

Section 10 of TS 36.413 [11] is applicable for the purposes of the present document.

Annex A (informative): Change history

TSG #	TSG Doc.	CR	Rev	Subject/Comment	New
2008-02				First draft	0.0.0
2009-10				Second draft with content	0.0.1
2009-11				For RAN3#66	0.1.0
2009-11				Capture agreements in RAN3#66	1.0.0
2009-12				Presented for approval at RAN#46	2.0.0
46	RP-091254			Approved at RAN#46	9.0.0
47	RP-100226	0001		Corrections to TS36.444	9.1.0
47	RP-100227	0003	1	Miscellaneous corrections to TS 36.444	9.1.0
47	RP-100227	0004	2	Misc corrections	9.1.0
47	RP-100227	0005	2	Introduction of MBMS Session Update in M3AP	9.1.0
47	RP-100227	0007	1	Editorial Correction on TS 36.444	9.1.0
47	RP-100227	0008	1	No support for E-RAB Pre-emption	9.1.0
49	RP-100906	0012	1	MBMS Session Update procedure	9.2.0
49	RP-100906	0013		Alignment of tabulars to agreed notation for TS36.413 and TS36.423	9.2.0
50	RP-101270	0015	1	Correction of ASN1 in M3AP	9.3.0
2010-12				Created Rel-10 version based on v. 9.3.0	10.0.0
SP-49	SP-100629			Clarification on the use of References (TS 21.801 CR#0030)	10.1.0
51	RP-110223	0018	1	Correction on MBMS Reset procedure	10.1.0
51	RP-110240	0019	2	Introduction of ARP	10.1.0
51	RP-110226	0020	1	Clarification on TEID value range	10.1.0
52	RP-110685	0021	2	Correction of references	10.2.0
54	RP-111650	0022		Correction on MBMS Session Stop	10.3.0
2011-12				Created Rel-11 version based on v. 10.3.0	11.0.0
54	RP-111655	0025	4	Correction of MCCH Update synchronization Mechanism	11.0.0
54	RP-111655	0026	5	Addition of M3 Setup	11.0.0
55	RP-120236	0027	2	Correction on Reset	11.1.0
55	RP-120236	0028	2	Corrections on M3 Setup and MCE Configuration Update Procedures	11.1.0
55	RP-120236	0030	3	Correct of reset	11.1.0
56	RP-120751	0032		Correction on usage of Time of MBMS Data Stop IE	11.2.0
56	RP-120751	0033	1	Correction on M3 Configuration Procedure	11.2.0
56	RP-120752	0037		Correction of Absolute Time	11.2.0
56	RP-120751	0038	1	Correction of MCE Configuration Update procedure in M3 interface	11.2.0
56	RP-120752	0040	1	Correction of ASN.1 Concerning the Presence of extendedMCE-ID	11.2.0
57	RP-121140	0042	1	Coding Rules	11.3.0
58	RP-121724	0044	1	Correction of MBMS Session Start Partial Success	11.4.0
59	RP-130212	0048	1	Correction for Session Update procedure	11.5.0
60	RP-130643	0049		Correction on the Sending Node of MBMS Session Update Failure	11.6.0
60	RP-130643	0053	2	Correction of the update of Minimum time to MBMS Data Transfer	11.6.0
63	RP-140297	0057	6	Restoration of eMBMS Bearer Services and logical M3 Connections in MCE	12.0.0
64	RP-140905	0060	1	MBMS Bearer priority Update	12.1.0
64	RP-140905	0061		Corrections on MBMS Restoration	12.1.0
67	RP-150356	0070	1	Rapporteur Review on 36444	12.2.0